
Seal Row Bench Attachment

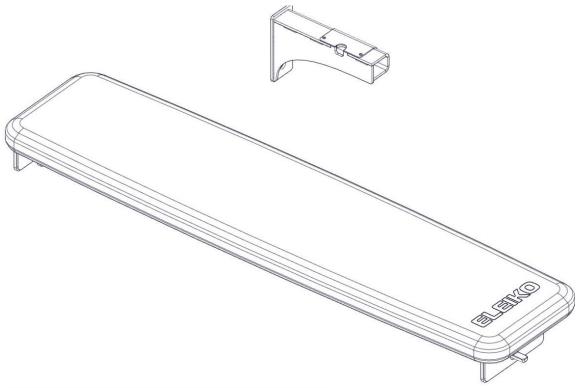





Content

Read Before Installation and Use

- 4 Caution
- 4 Safety instructions

Preventive Maintenance and Inspections

- 4 Cleaning
- 5 Spare parts and service
- 5 Warranty

Product Info

- 5 Purpose
- 5 General instructions for use
- 5 Description

User Guide

- 6 Required tools
- 6 List of components
- 7 Assembly instructions



Read before installation and use

CAUTION

The equipment must be installed and used in a place whose access and supervision are specifically controlled by the owner.

Be sure to install the equipment on a stable base and properly level the equipment. ELEIKO recommends that all equipment is secured to floor and installed by a licensed contractor or an ELEIKO-installer.

SAFETY INSTRUCTIONS

It is the responsibility of the purchaser of ELEIKO products to instruct all users and supervising personnel on proper usage of the equipment.

- 1. All included warnings (labels) and instructions MUST be read before the use of any ELEIKO-equipment. Use each equipment as it is intended for.
- 2. A user MUST get a medical examination and proper instructions before the use of any ELEIKO-equipment.
- 3. DO NOT let anyone, under any circumstances, use equipment that appears to be damaged. Do not try to repair any equipment before consulting an ELEIKO technician.
- 4. DO NOT replace the components of ELEIKO-equipment with other none ELEIKO equipment (magnetic safety pin, frames, bars), do not improvise. If there are any doubts consult an ELEIKO representative prior to any intervention.
- DO NOT overload the equipment and DO NOT try to exceed personal strength Levels.
- **6.** Children under the age of 14 must be supervised by an adult.
- 7. DO NOT remove any safety labels from the ELEIKO-equipment. ELEIKO is not responsible if a label is removed. Replace damaged labels immediately.
- **8.** Eleiko package for products can be made of wood, be aware of splinters, MUST use gloves and proper work wear.
- **9.** Eleiko package material could be a risk when handling, be aware of crushing, MUST use work wear including gloves and hard shoes.
- Eleiko products and packing material is heavy, MUST use proper lifting technique, work wear and hard shoes.

Preventive Maintenance & Inspections

Cleaning:

Daily:

Cleaning of upholstery.

Regularly:

- Clean surfaces on the frames and tubes from dust and dirt.
- Check that all bolts between parts, walls and floors are properly tightened, according to recommendations.
- Check equipment for sharp edges. Replace parts with sharp edges.
- Check equipment structural frames and welds to ensure they are free from cracks, irregularities or any other abnormalities. If in doubt, consult an Eleiko representative before product use.

Cleaning and Care:

- Apply a mild soap detergent to a lint free cloth, then wipe down product surface.
- While it is safe to use an alcohol-based neutral pH7 solution on surface-treated steel elements of the benches and racks, take care to avoid pads and cushions.
- We recommend alcohol-free, bleach-free, and o-phenylphenol (OPP) ammonia-free wipes.

See also www.eleiko.com.

Spare Parts and Service

Contact Eleiko for spare parts and service:

Eleiko Group AB | Klastorpsvägen 18 | SE-302 62 HALMSTAD | Sweden

E-mail: info@eleiko.com | Phone: +46 35 17 70 70

www.eleiko.com

Warranty

All products manufactured by ELEIKO are warranted to the original purchaser to be free from defects in workmanship and / or materials under normal use or service as follows:

- -10 years on structural frame welds (NOT on moving parts).
- -1 year on wear and tear parts.
- -1 year on polyurethane upholstery.

Product Info

Purpose

Creates a seal row bench on an already existing Power Rack with Safety Beams. Saves space and can easily be stored on the included storage unit.

General Instructions For Use


- 1. Put in the fixed pin in the front beam. Do this with an angle on the bench to be able to get it in.
- 2. Lower the high end of the bench and pull out pop pin on the opposite side to attach it.
- 3. Now you have a Seal Row Bench attached to the Safety Arms on the Power Rack
- 4. When finished, remove the bench by pulling out the pop pin and lift the same end up to be able to get the fixed pin out.
- 5. Hang the bench on the attachment mounted on the rack, use pop pin to lock it in position.

Description

Max total weight	
Product weight	

Dimensions (L x W x H)	Dimensions	(L x	W x	H)
------------------------	------------	------	-----	----

Bench		
kg	350	
lbs	770	
kg	16,5	
lbs	37	
mm	1266x302x130	
inch	50x12x6	

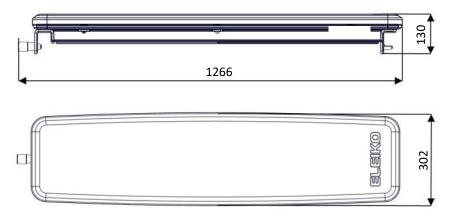





User Guide


Required ToolsYou need the following tools to assemble the equipment.




 List of Components

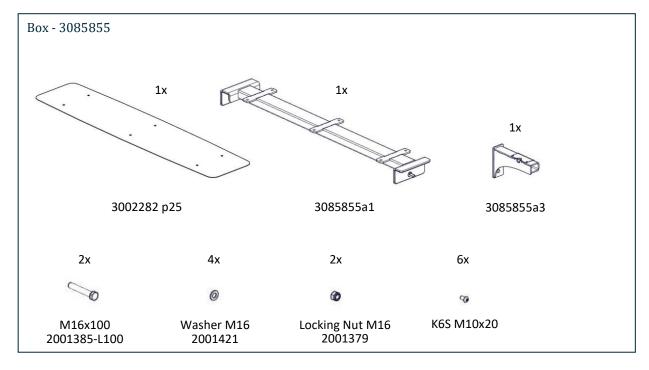

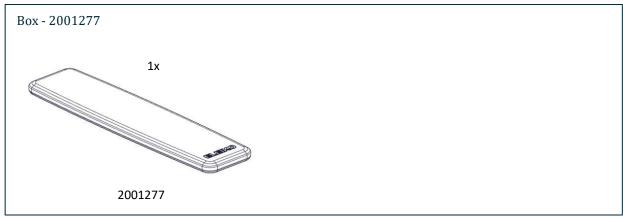





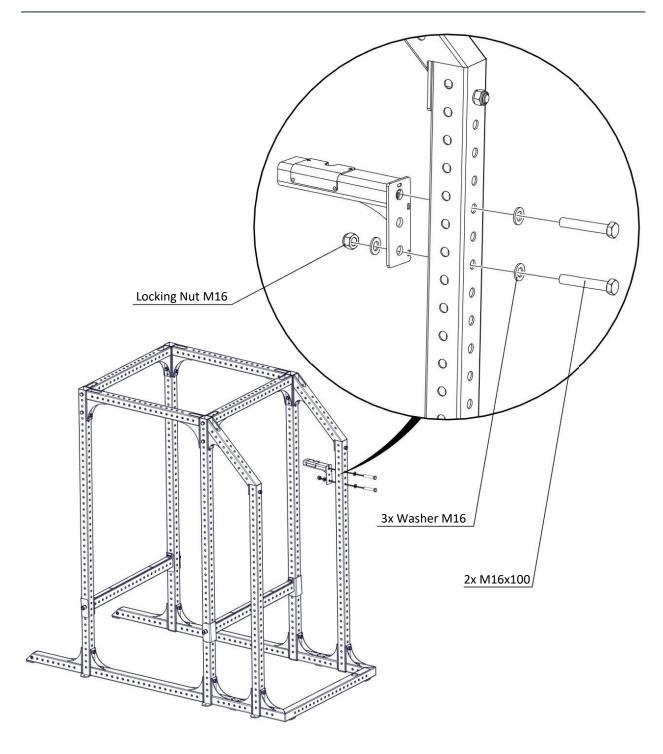








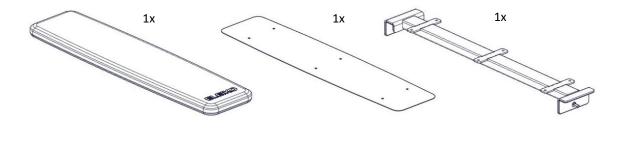

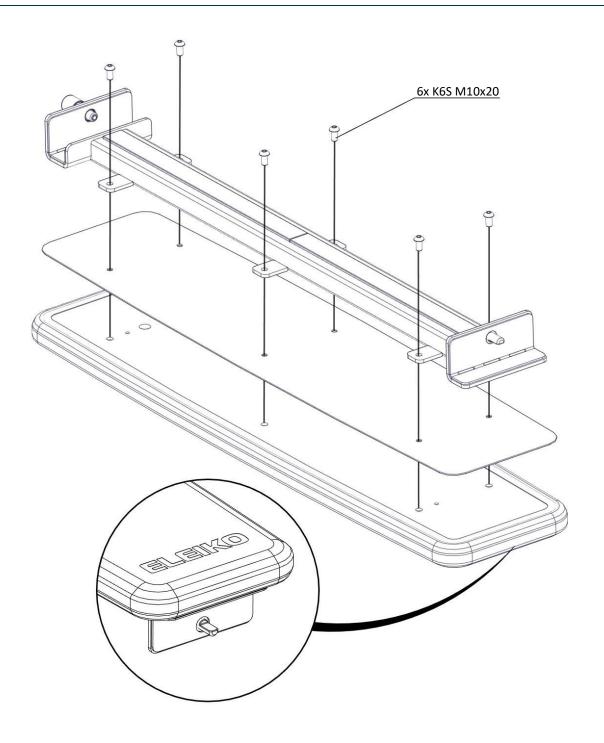


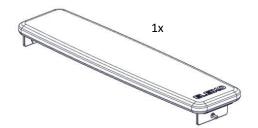


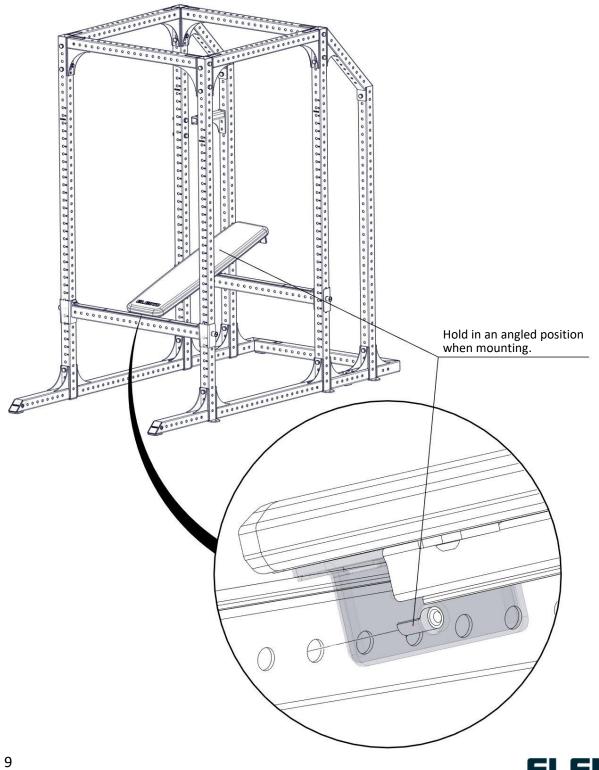

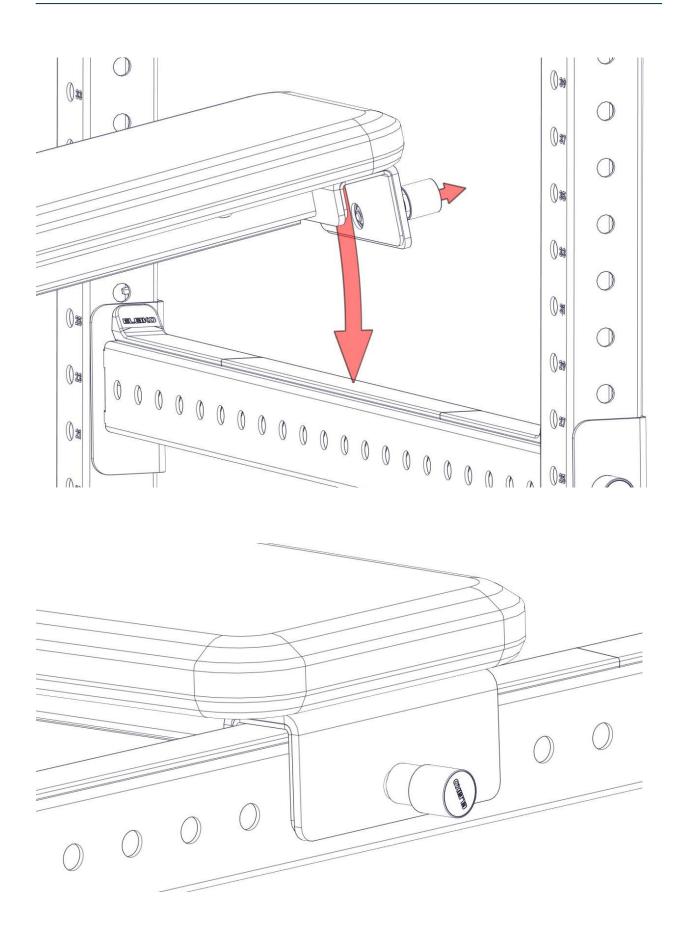



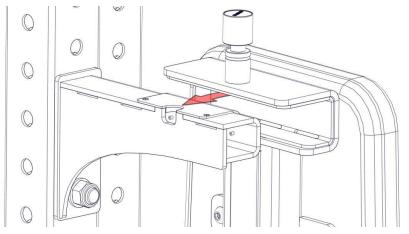

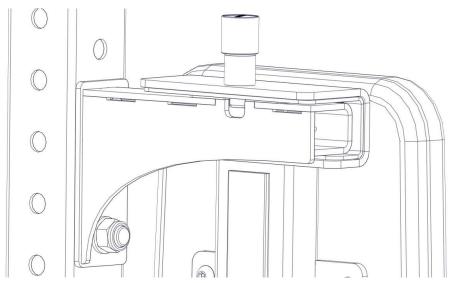

Eleiko Group AB Klastorpsvägen 18 302 62 Halmstad Sweden

+46 35 17 70 00 info@eleiko.com

