
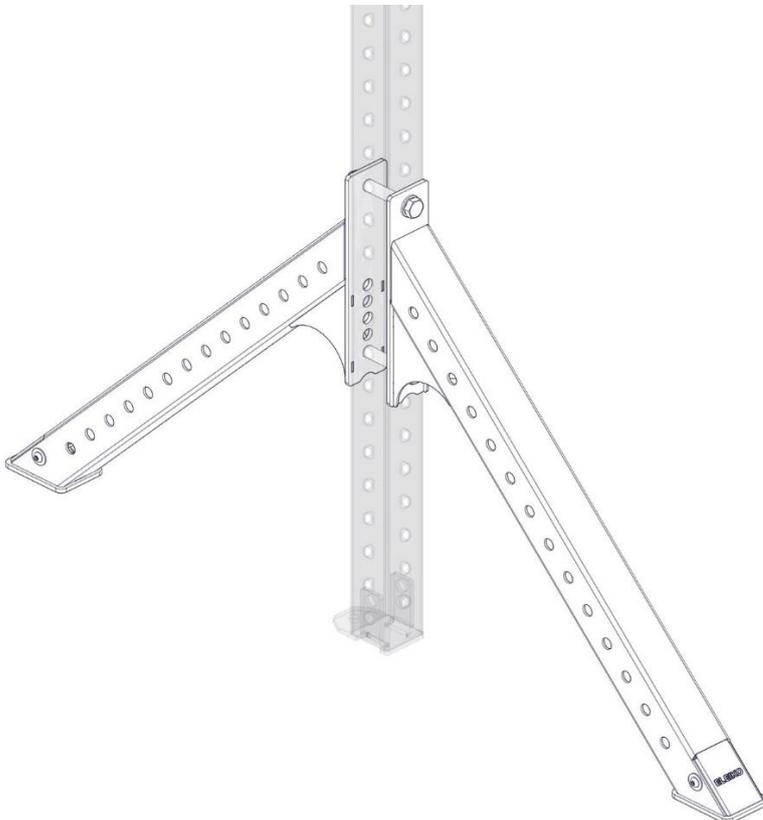


Art.no. 2001925

Angled Leg Support

RAISE THE BAR

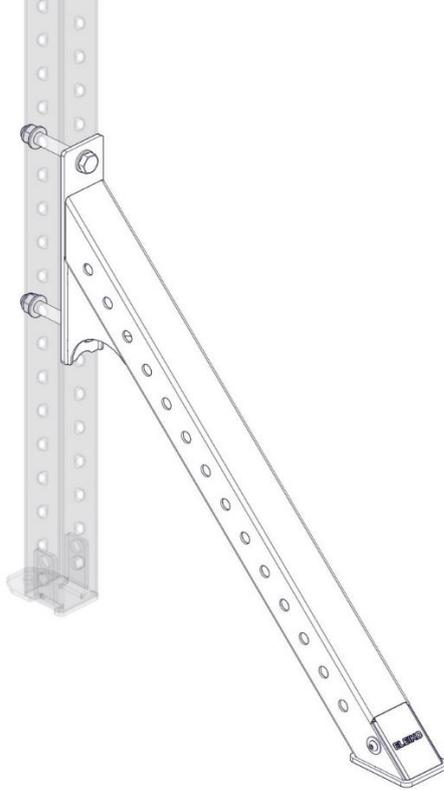

ELEIKO

Preventive Maintenance and Inspections

Regularly:

- Clean surfaces from dust and dirt.
- Check that all bolts between parts, walls, floors are properly tightened, according to recommendations.
- Check equipment for sharp edges and replace if necessary.
- Check tubes and welds for cracks or other defects, replace if necessary.

See also www.eleiko.com.

Spare Parts and Service

Contact Eleiko for spare parts and service:

Eleiko Group AB | Klastorpsvägen 18 | SE-302 62 HALMSTAD | Sweden
E-mail: info@eleiko.com | Phone: +46 35 17 70 70 | www.eleiko.com

Warranty

All products manufactured by ELEIKO are warranted to the original purchaser to be free from defects in workmanship and / or materials under normal use or service as follows:

10 years on welds on structural frame (NOT on moving parts)

Normal wear and tear do not fall under the warranty.

Product Info

Purpose

Used to support Eleikos racks, rigs and other units.

General Instructions for Use

1. Attach 1, 2 or 3 legs to create a safe unit to meet the requirement of four support points.
2. Adjust machine feet so that you get a stable unit.

Description

2001925		
Product weight	Kg	6,4
	Lbs	14,1
Dimensions (L x W x H)	Mm	622x82x690
	Inch	24.5x3,2x27,2

User Guide

Required Tools

You need the following tools to assemble the equipment.



Wrench
Sizes: 14, 17 & 24




Socket Wrench
Size: 24



Hex Key-kit
Size: 5


List of Components

1x (2001925-S)
2x (2001925)

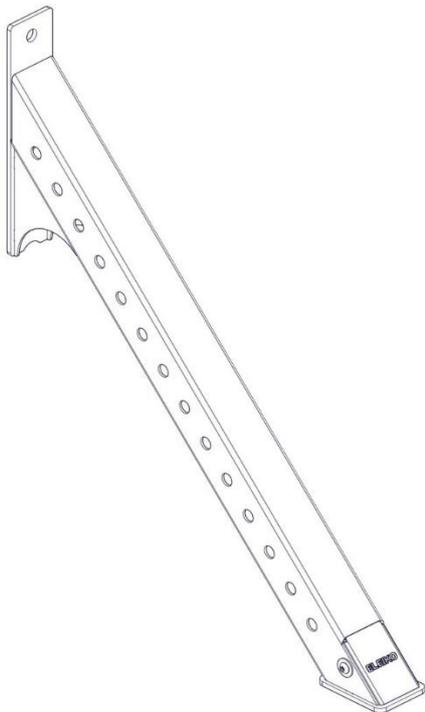

2001925

2x

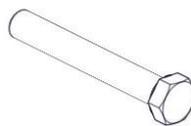

M16 x 110
2001385-L110

2x



Locking Nut M16
2001379


4x



Washer M16
2001421




1

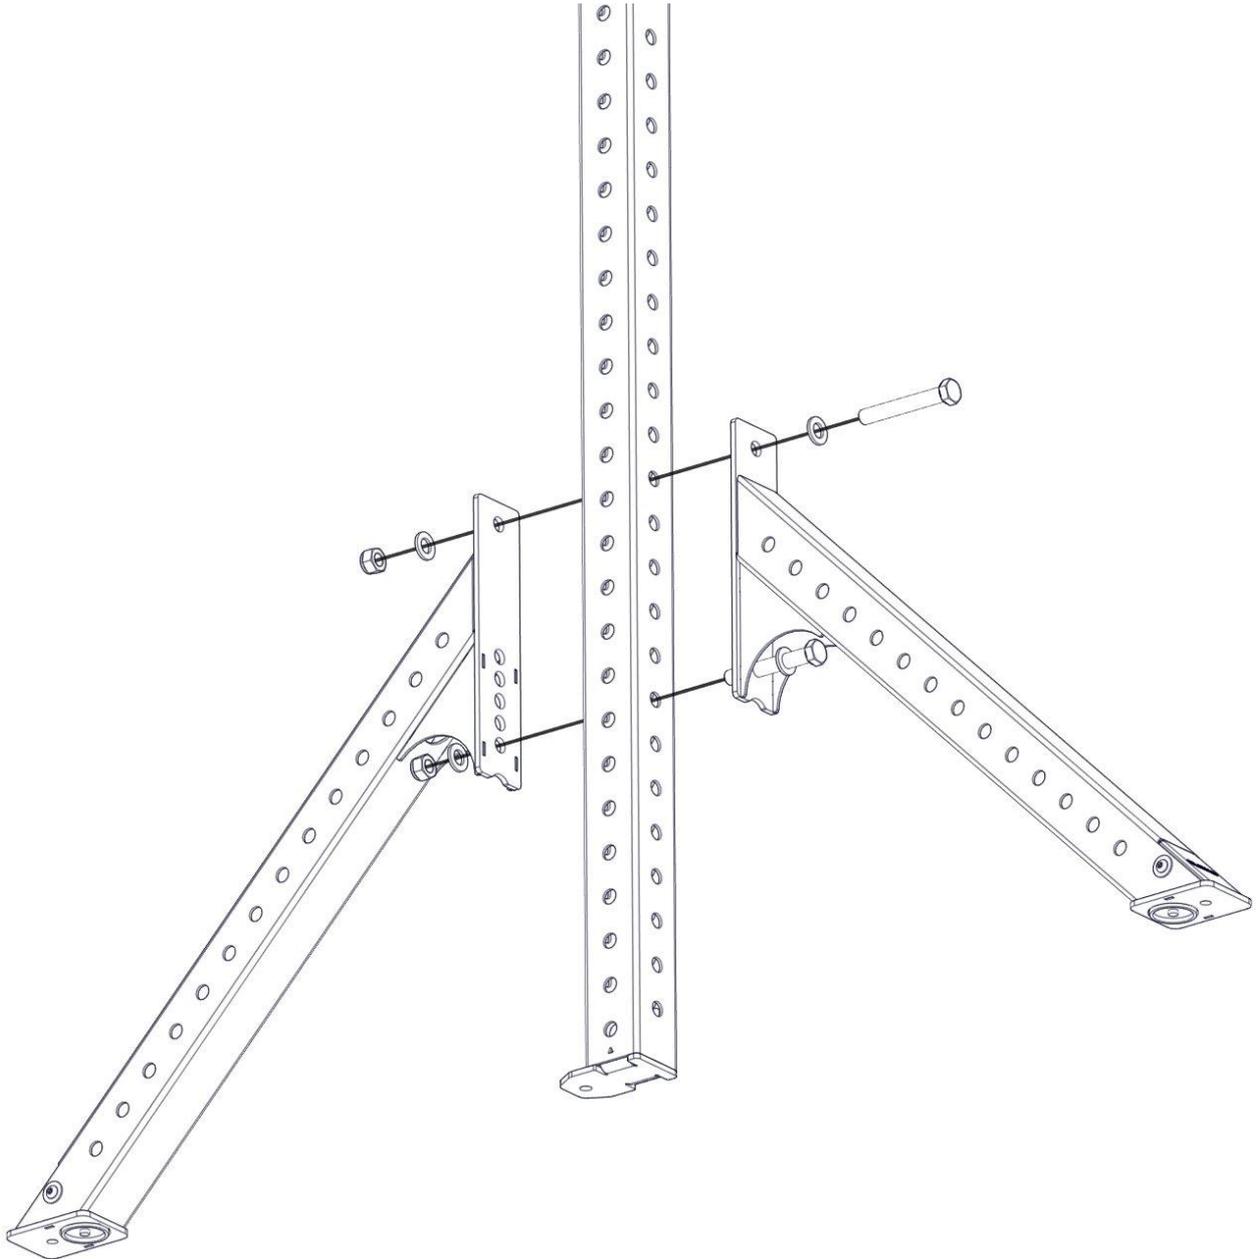


Adjust the machine feet. Proceed to page 6.






2

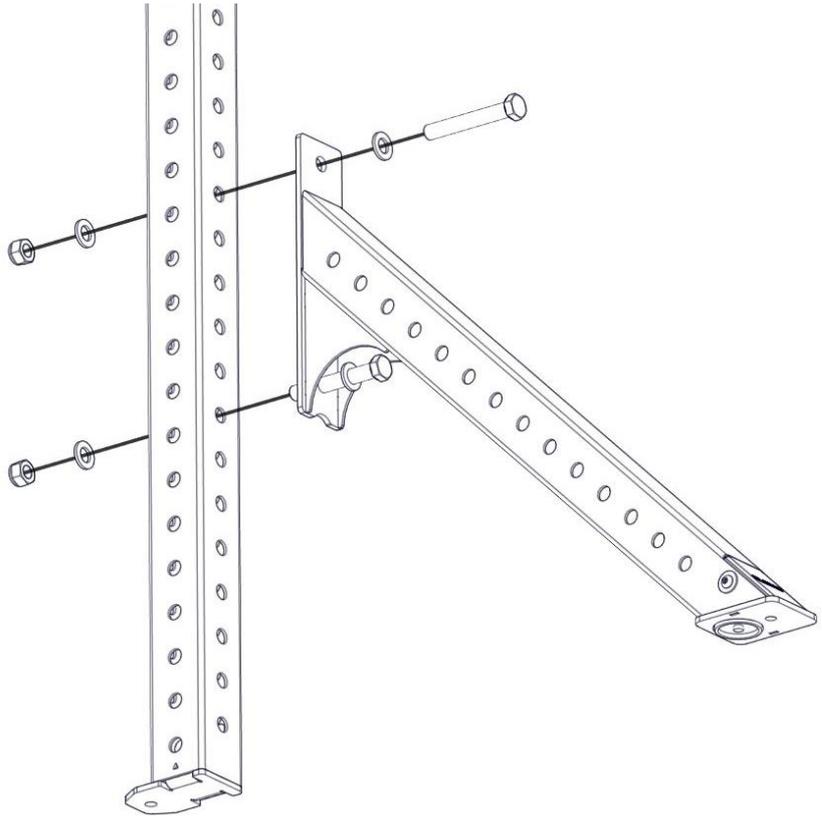

Adjust the machine foot.

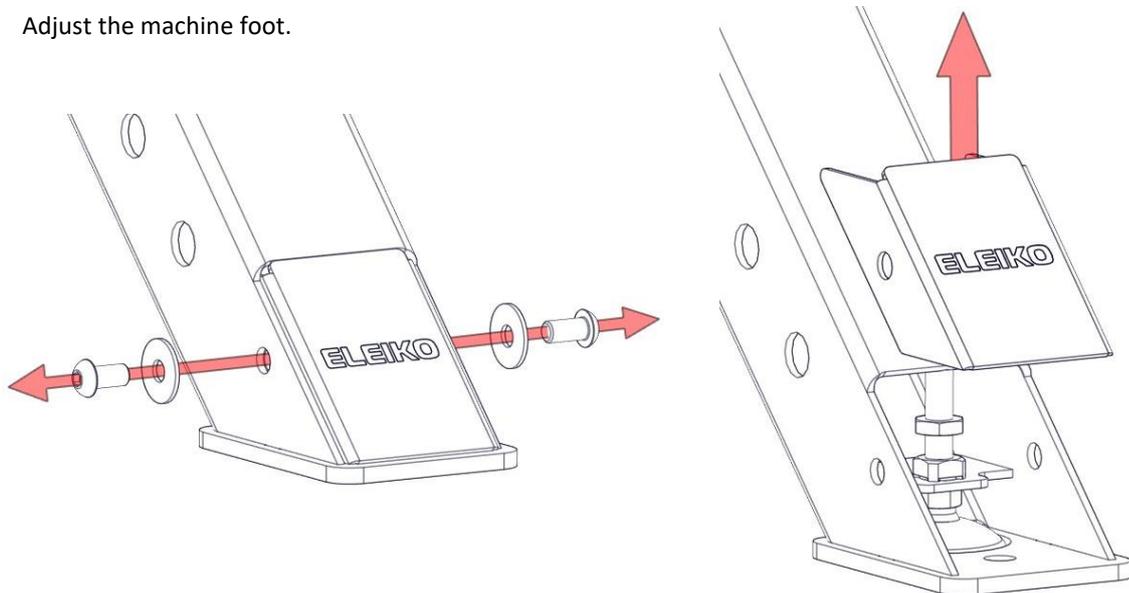

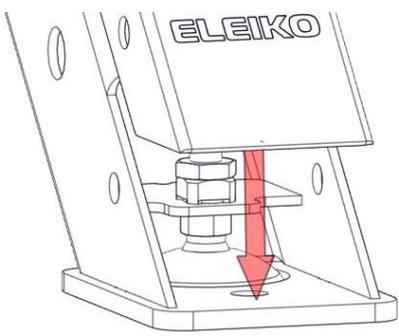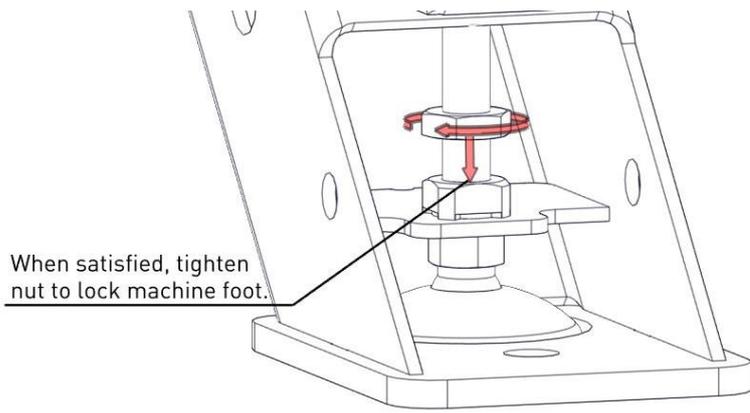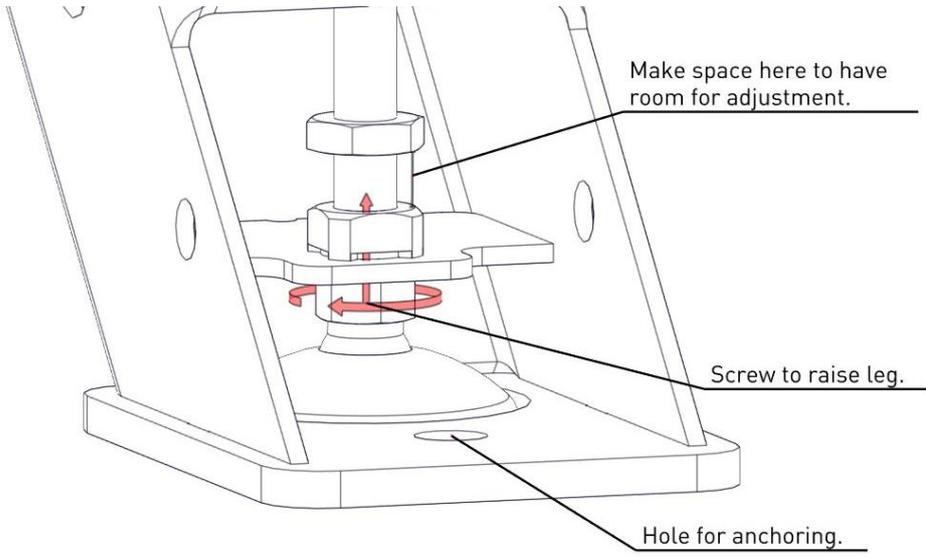

Eleiko Group AB
Klastorpsvägen 18
302 62 Halmstad
Sweden

+46 35 17 70 00
info@eleiko.com