



## Scale KFC-TM - Short Instructions

### Placement of scale platform

 
1. Place the weighing platform on a firm, level surface, away from heaters, strong draughts and vibrations.
2. Lift the stainless-steel casing until the spirit level is visible. Adjust the feet on the weighing platform until the air bubble in the spirit level sits in the middle of the ring.
3. Re-check the level each time the scale is moved to a new location.

### Turn on and off the instrument

Press and hold the  **ON/OFF** key to switch the scale on. The display performs a self-test and is ready for weighing as soon as the weight value appears.

Press and hold  **ON/OFF** again to switch the scale off. A short press toggles the display backlight.

### Zero the scale


If the unloaded platform does not display zero, press  **ZERO** to reset the display back to 0.

### Weighing

1. Place the item on the platform.
2. Wait until the stability symbol (  ) appears on the left side of the display.
3. Read the weight value.


### HOLD function

Use this function to weigh objects that do not remain stable.

1. Place item on the scale.
2. Activate the Hold function by long pressing the  **F1-key**.



3. The display shows **[HOLD]** and horizontal dashes. This remains visible until a stable value is captured.

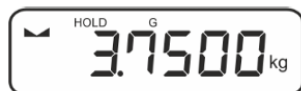

4. When a stable weight value has been determined, **[HOLD]** appears at the top of the display. After the load is removed, the value is left in the display for another 10 seconds.