 
 



## Scale KFC-TM - Calibration

External adjustment with user-defined adjustment weight

The scale is calibrated by Svenska Våg AB prior to delivery.

Depending on the installation location, a new calibration may be required on site due to local variations in gravitational acceleration.

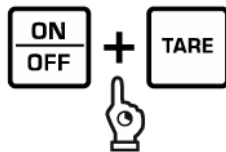

⇒ Press and hold the **TARE** and **ON/OFF** buttons simultaneously to enter the setup menu.


⇒ Wait until the first menu item < cAL > is displayed.

⇒ Confirm with the → button. < cALExt > will be displayed.

⇒ Use the navigation keys ↑↓ to select < cALEud >.

⇒ Confirm with the → button. The numeric input window for the adjustment weight appears. The active digit flashes.

⇒ Provide adjustment weight. Enter the adjustment weight value using the navigation keys ↑↓ and move to the next digit using the → button.

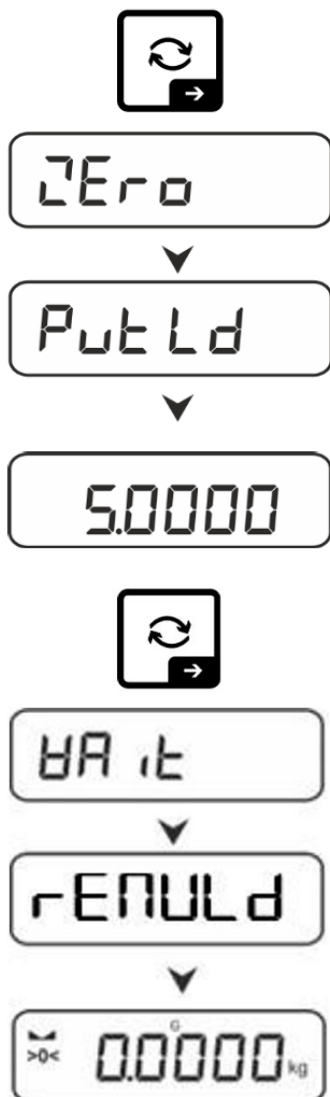

- ⇒ Make sure the scale is empty and confirm the entered value with the → button.
- ⇒ < ZEro > and < Put Ld > followed by the value of the adjustment weight to be placed, will be displayed.
- ⇒ Place the adjustment weight on the platform and confirm with → button, < WAit> will be displayed.
- ⇒ When < rEMVLd > is displayed, remove the adjustment weight.
- ⇒ After successful adjustment the instrument automatically returns to weighing mode. If an adjustment error occurs, the display will show the error message < WrOnG >. Switch off the instrument and repeat the adjustment procedure.