 


Eleiko Rack Platform

Eleiko Half Rack Platform - Small
Eleiko Double Half Rack Platform - Small
Eleiko Power Rack Platform - Small

RAISE THE BAR

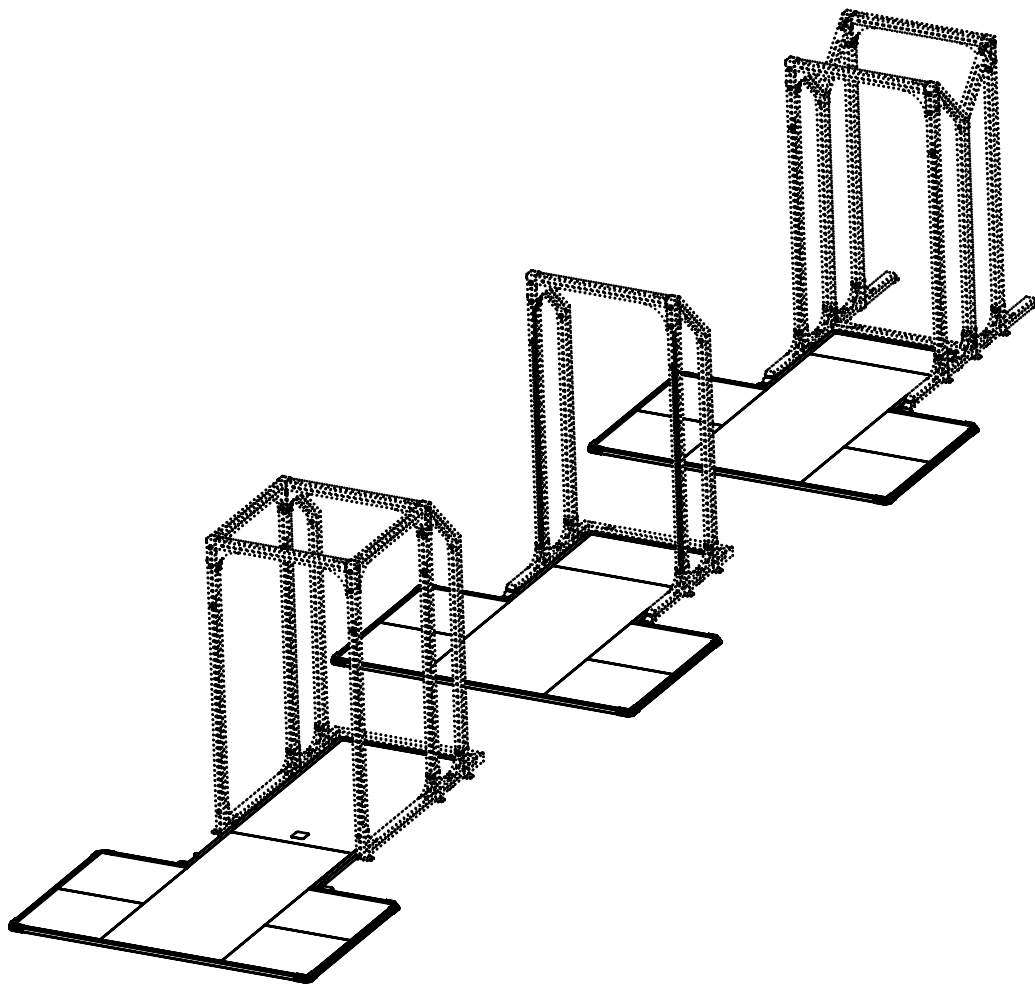

ELEIKO

Content

2 Preventive maintenance & inspections

- 2 Regularly
- 2 Spare parts and service
- 2 Warranty

3 Read before installation and use

- 3 Caution
- 3 Safety instructions

4 Product info

- 4 Purpose
- 4 General instructions for use
- 4 Legend
- 4 Product weight and size

5 User installation

- 5 Required tools
- 5 Safety area and recommendations

6 List of components

- 6 Frame insert
- 6 Frame drop zone
- 7 Standing deck
- 7 Drop zone

8 Assembly instructions

- 8 Frame insert
- 9 Standing deck
- 10 Frame drop zone
- 11 Drop zone

Preventive maintenance & inspections

Regularly

NOTE: The safety level of the equipment can only be maintained if it is examined regularly for damage and wear.

- Clean the surfaces on frames and tubes from dust and dirt.
- Check that all bolts between parts, walls, floors are properly tightened.
- Check equipment for sharp edges and replace if necessary.

Spare parts and service

Contact Eleiko for spare parts and service:
www.eleiko.com - Service & Parts

Warranty

All products manufactured by ELEIKO are warranted to the original purchaser to be free from defects in workmanship and / or materials under normal use or service as follows:

- 10 years on welds on structural frame (NOT on moving parts)
- 2 years on Standing deck
- 1 year on other parts

Read before installation and use

Caution

The equipment must be installed and used in a place whose access and supervision are specifically controlled by the owner.

Be sure to install the equipment on a stable base and level the equipment properly. Eleiko recommends that all equipment is secured to floor and installed by a licensed contractor or an Eleiko-installer.

This equipment is intended for indoor use only.

Safety instructions

It is the responsibility of the purchaser of Eleiko products to instruct all users and supervising personnel on proper usage of the equipment.

1. All included warnings (labels) and instructions **MUST** be read before the use of any Eleiko-equipment. Use each equipment as it is intended for.
2. A user **MUST** get a medical examination and proper instructions before the use of any Eleiko-equipment.
3. **DO NOT** let anyone, under any circumstances, use equipment that appears to be damaged. Do not try to repair any equipment before consulting an Eleiko technician.
4. **DO NOT** replace the components of Eleiko equipment with other non-Eleiko equipment (magnetic safety pin, frames, bars), do not improvise. If there are any doubts consult an Eleiko representative prior to any intervention.
5. **DO NOT** overload the equipment and **DO NOT** try to exceed personal strength levels.
6. Children under the age of 14 must be supervised by an adult.
7. **DO NOT** remove any safety labels from the Eleiko-equipment. Eleiko is not responsible if a label is removed. Replace damaged labels immediately.
8. Eleiko package for products can be made of wood, be aware of splinters, **MUST** use gloves and proper work wear.
9. Eleiko package material could be a risk when handling, be aware of crushing, **MUST** use work wear including gloves and hard shoes.
10. Eleiko products and package material is heavy, **MUST** use proper lifting technique, work wear and hard shoes.

Product info

Purpose

Designed for seamless integration into Presteria racks.

General instructions for use

Indoor use only.

Stand on the Standing deck when lifting.

Only drop weights on drop zone.

Steel plate only to be dropped from deadlift position.

Legend

 
HR - Half Rack

DHR - Double Half Rack

PR - Power Rack

Example for description
of platform combination

HR = Half Rack

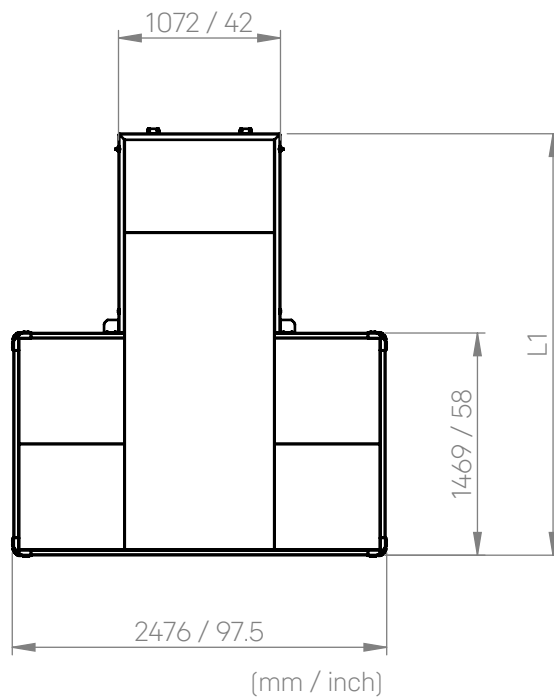


Product weight and size

		HR	DHR	PR
Product weight	kg / lbs	122 / 269	117 / 258	148 / 326
L1	mm / inch	2787 / 110	2578 / 101.5	3960 / 156
Height	mm / inch	35 / 1.4	35 / 1.4	35 / 1.4

User installation

Required tools

 You need the following tools to assemble the equipment.



Spanner
Size: 13



 
Socket Wrench
Size: 13




Socket Extension



Hex Key-kit
Size: 5



Spirit Level

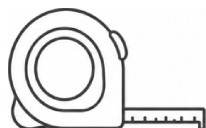 

Measuring Tape



Protection Gloves



Safety Shoes

 


Safety area and recommendations



Clearance

Before assembly, make sure you have enough clearance on all sides of the equipment, not less than 600 mm / 24 inches. Take into account the accessibility to remove bar and weights.

Recommended to bolt to ground


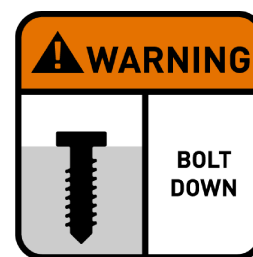


  Eleiko recommends that this product should be bolted to the ground. Make sure the ground is solid and level. Consult a licensed contractor to choose the appropriate anchoring fasteners for your facility. See the position of the anchoring point below.


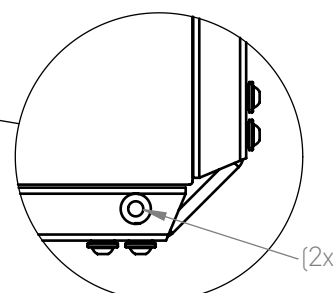
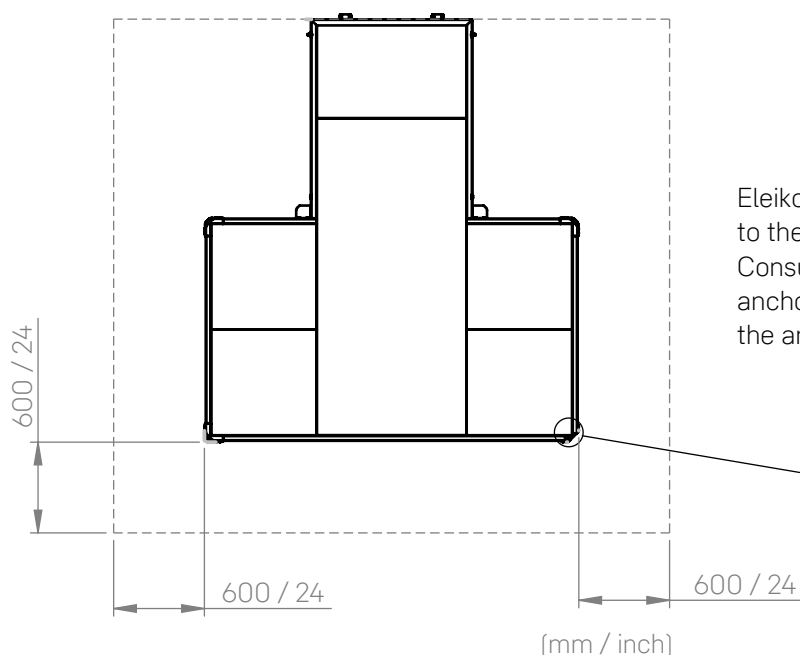




List of components

  Frame insert

2002416 HR 2002717 DHR 2002715 PR  2002424 (1x)	 2002422 HR (1x) 2002701 DHR (1x) 2002701 PR (1x)	 2002423 HR (1x) 2002702 DHR (1x) 2002702 PR (1x)	 2002623 PR (1x)	 2002714 PR (1x)	Screw kit  Screw M8x25 2000747-L25 HR, DHR (6x) PR (10x)  Washer (C) 2002466 HR, DHR (4x) PR (8x)  Washer 8 (A) 2001422 HR, DHR (4x) PR (8x)  Washer 8 (B) 2001718 (8x)  Nut M8 2002073 HR, DHR (6x) PR (10x)
---	--	--	---	---	---

   Frame drop zone

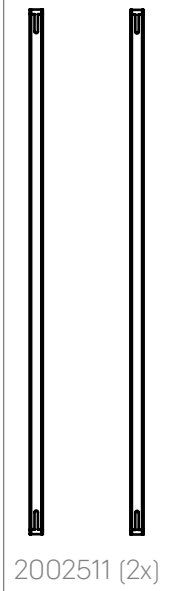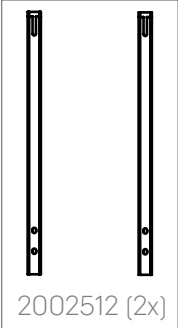
2002418 (1x) 	2002591 (1x)  2002511 (2x)	2002574 (1x)  2002512 (2x)
---	---	---

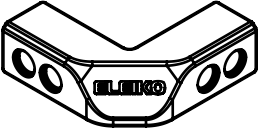  2002569 Screw kit  Screw M8x16 2000747-L16 (16x)  Washer (C) 2002466 (16x)	 2002420 (4x) (Available as spare part)  2002417 (4x)
---	---


List of components

Standing deck

 Standing deck

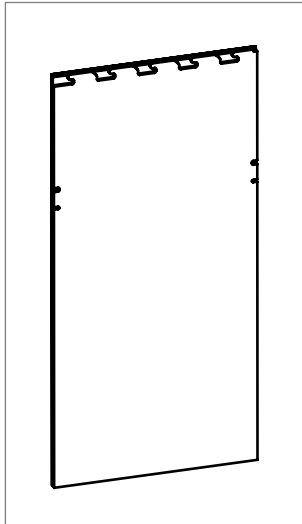

 
2002581 **HR, DHR** (1x)
2003420 **PR** (1x)

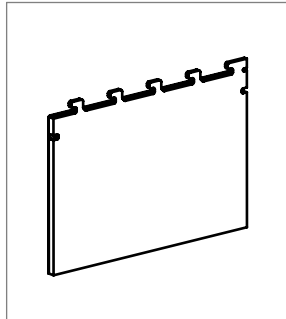

2002585 **HR** (1x)
2002583 **DHR** (1x)
2002584 **PR** (1x)

Drop zone

 Rubber tile

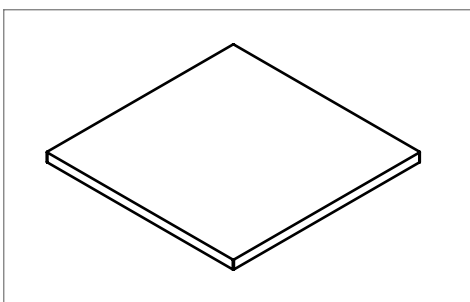


2002721 (4x)
(Available as spare part)


Assembly instructions

Frame insert

 
1.

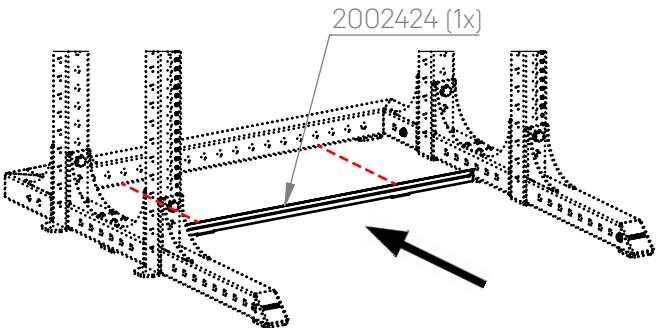

 
2. HR & DHR

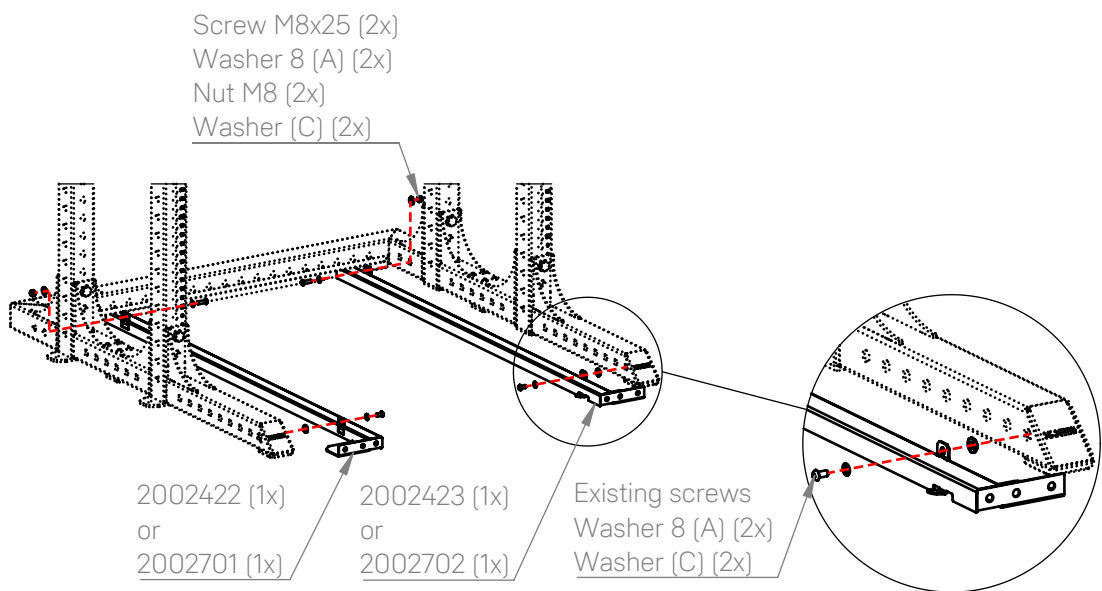


 
2. PR

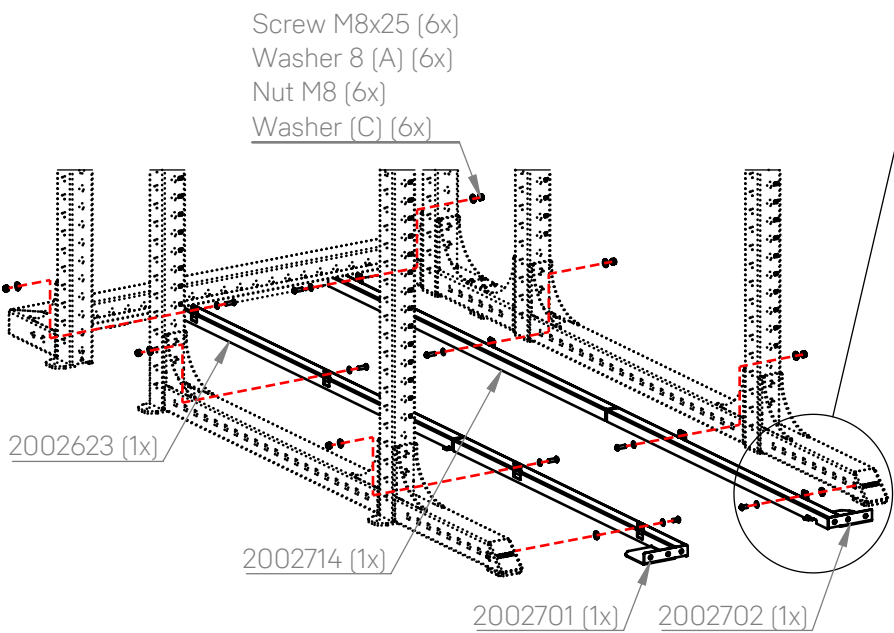

Standing deck

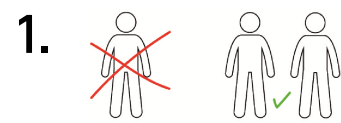 


  Ensure the Standing deck is properly inserted under the frame and lowered onto the tab, with the tab properly inserted into the slot in the Standing deck.

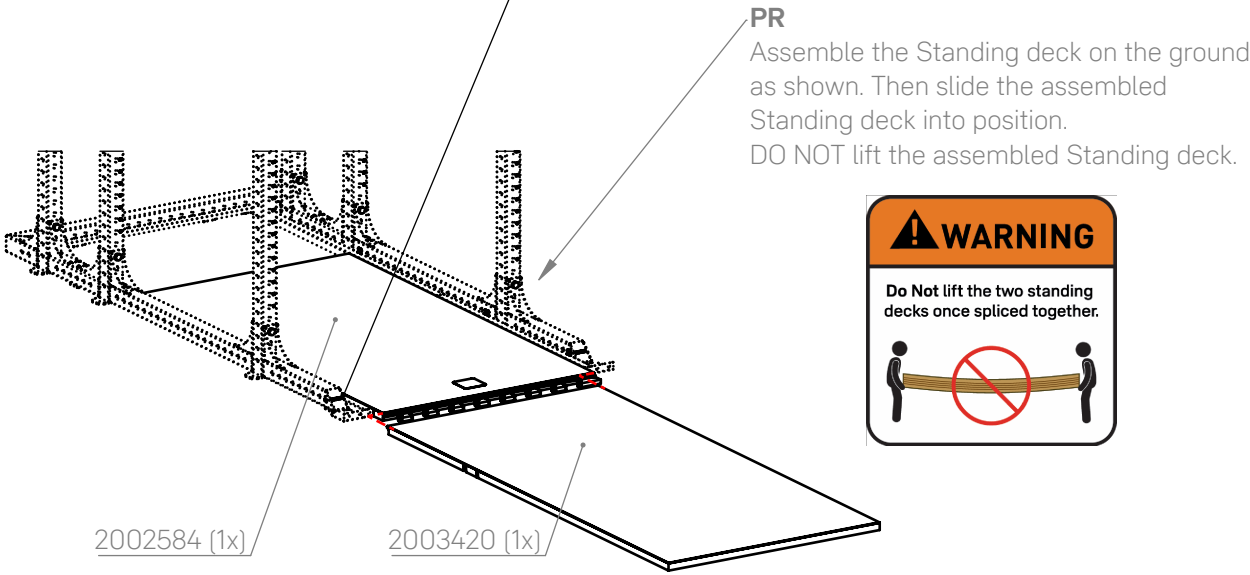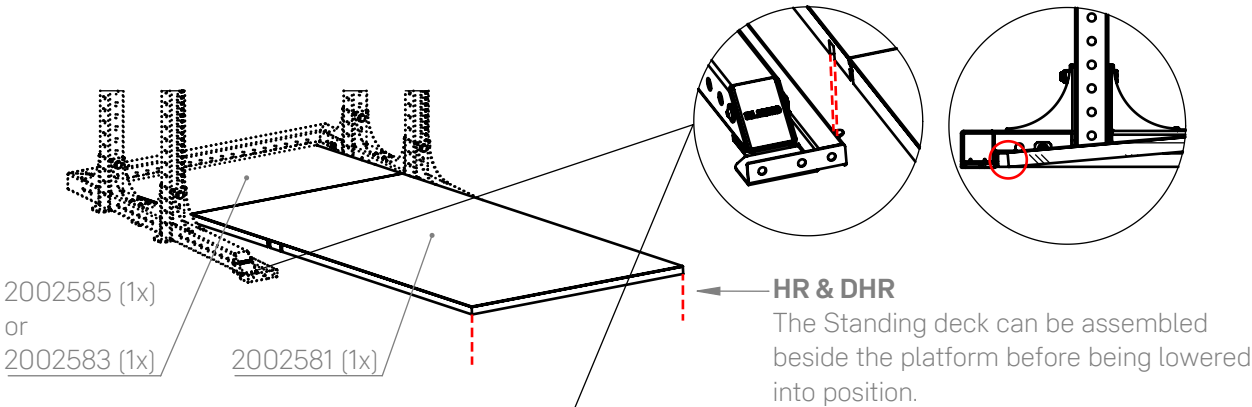


Frame drop zone

 1.

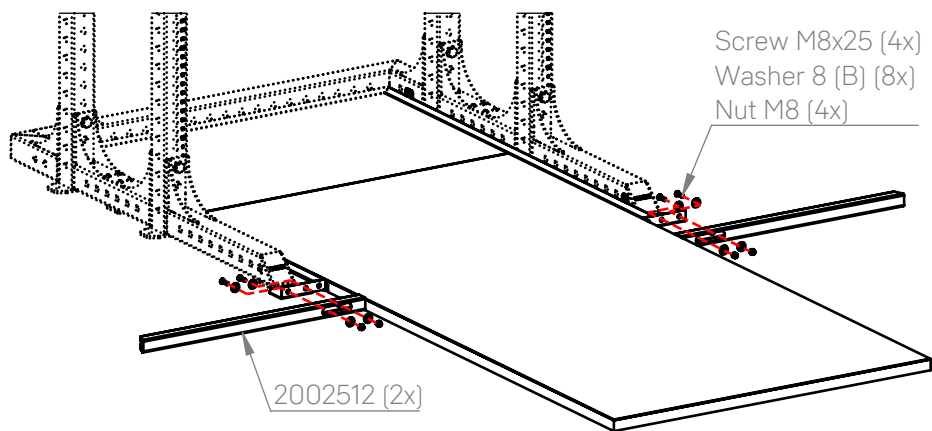


2.

 Pre-assemble the corner kit. Leave the screws loose enough to allow the frame to slide into position.

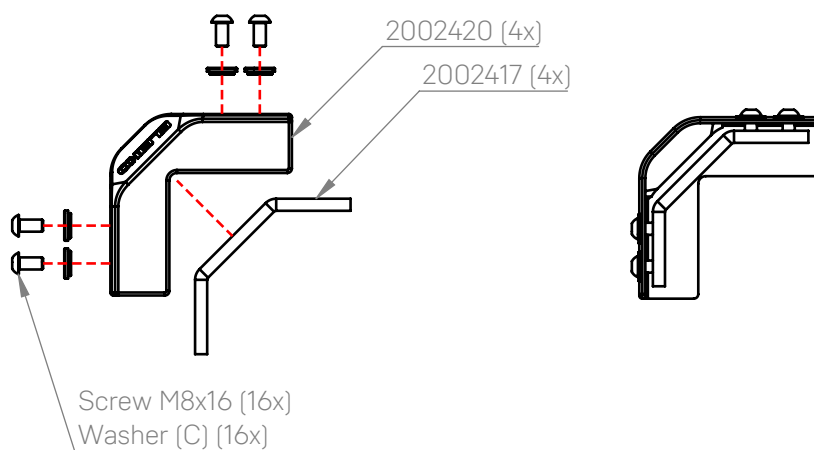


 3.

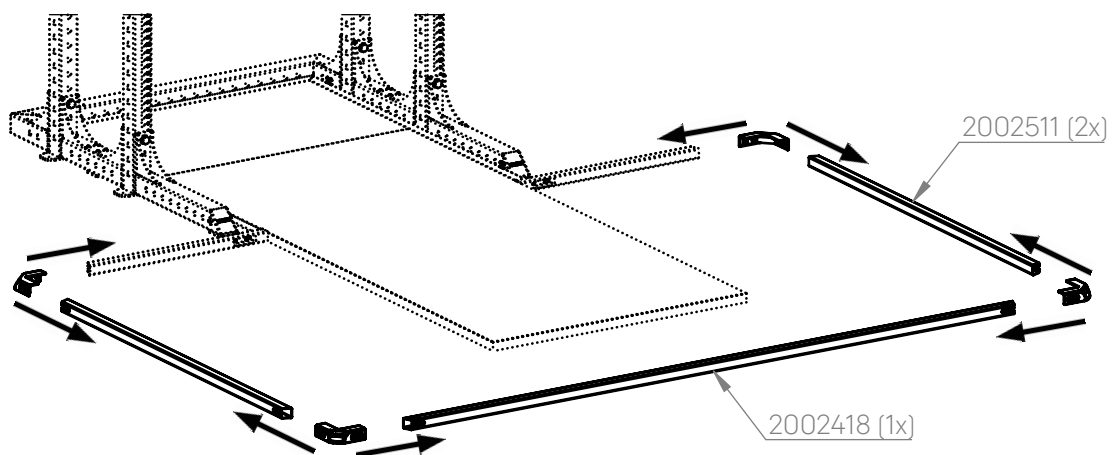


Drop zone

 1.

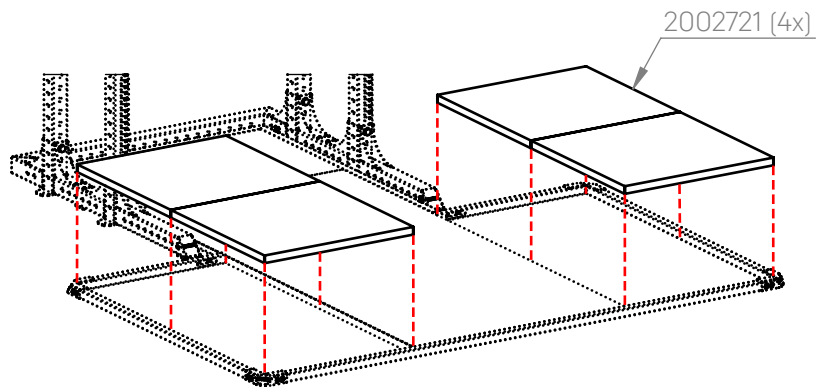

 2.

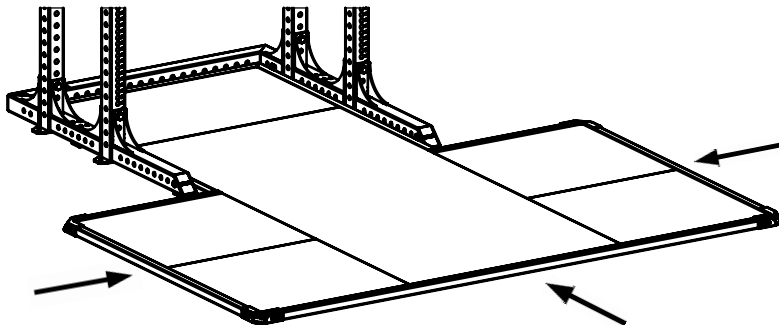

Adjust the frame size by loosening the screws on the corners. Push the frame until it is tight against the rubber tiles, then tighten the screws.

Eleiko Group AB
Klastorpsvägen 18
302 62 HALMSTAD
Sweden

info@eleiko.com
+46 35 17 70 70
www.eleiko.com

ELEIKO