
# **ELEIKO CLASSIC SEAL ROW**

3061762-XXX

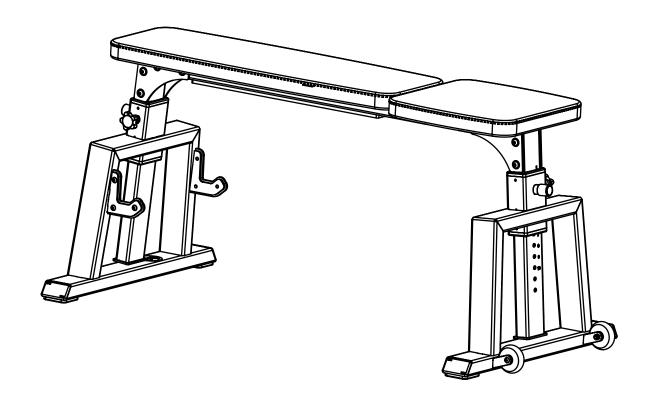



#### READ BEFORE INSTALLATION AND USE

#### **CAUTION**

The equipment must be installed and used in a place whose access and supervision are specifically controlled by the owner.

Be sure to install the equipment on a stable base and properly level the equipment. ELEIKO recommends that all equipment is secured to floor and installed by a licensed contractor or an ELEIKO-installer.

#### SAFETY INSTRUCTIONS

It is the responibility of the purchaser of ELEIKO products to instruct all users and supervising personnel on proper usage of the equipment.

- **1.** All included warnings (labels) and instructions **MUST** be read before the use of any ELEIKO-equipment. Use each equipment as it is intended for.
- **2.** A user **MUST** get a medical examination and proper instructions before the use of any ELEIKO-equipment.
- **3. DO NOT** let anyone, under any cuircumstances, use equipment that appears to be damaged. Do not try to repair any equipment before consulting an ELEIKO technician.
- **4. DO NOT** replace the components of ELEIKO-equipment with other none ELEIKO-equipment (magnetic safety pin, frames, bars), do not improvise. If there are any doubts consult an ELEIKO representative prior to any intervention.
- **5. DO NOT** overload the equipment and **DO NOT** try to exceed personal strength levels.
- 6. Children under the age of 14 must be supervised by an adult.
- **7. DO NOT** remove any safety labels from the ELEIKO-equipment. ELEIKO is not responsible if a label is removed. Replace damaged labels immediately.

#### PREVENTITIVE MAINTENANCE & INSPECTIONS

DAILY:

Cleaning of upholstery.

**REGULARLY:** 

Clean the surfaces on frames and tubes from dust and dirt.

Check that all bolts between parts, walls, floors are properly tightened, according to recommendations.

#### WARRANTY

All products manufactured by ELEIKO are warranted to the original purchaser to be free from defects in workmanship and / or materials under normal use or service as follows:

10 years on welds on structural frame (NOT on moving parts)

180 days on upholstery

Normal wear and tear does not fall under the warranty of two years.

#### ADDITIONAL INFORMATION

This equipment is for indoor use only. This equipment is in compliance with SS-EN ISO 20957-1 and the relevant chapter SS-EN 957-4.




### **PRODUCT SPECIFICATIONS**

## Product usage...


Product weight	51.5 kg / 110 lbs
Max user weight	150 kg / 331 lbs
Max training weight	350 kg / 772 lbs
Dimensions (L x W x H)	1455x705x(Adjustable 570-870 mm) 58''x28x( Adjustable 23''-34'')

### **FOOTPRINT AREA**

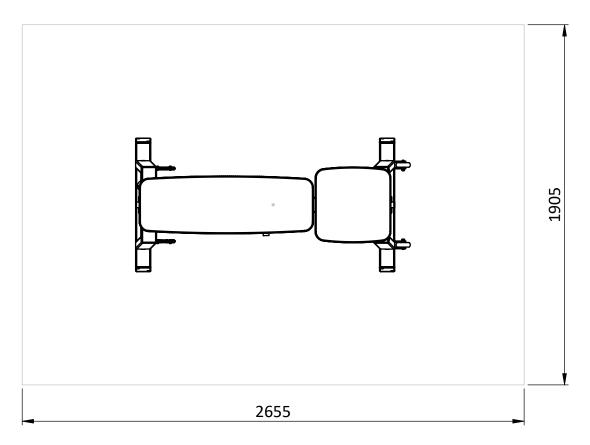




## **CONTENTS**

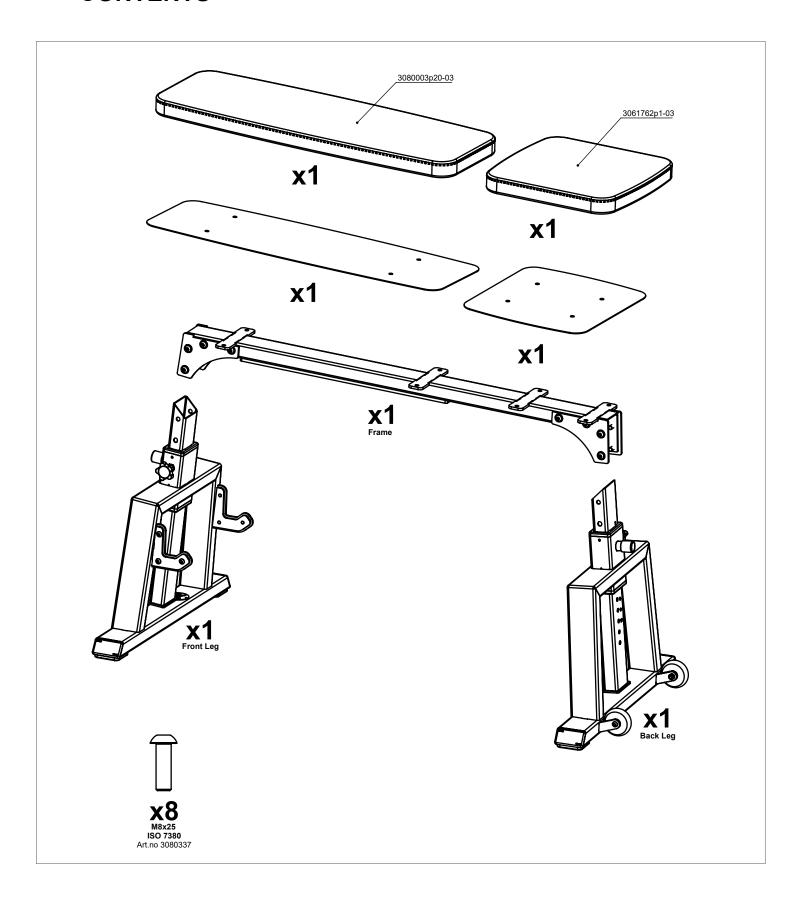



### **REQUIRED TOOLS**

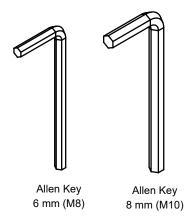

### **GENERAL**


The table below is general torque to use for different threads. Use these torques, if nothing else is set. Below numbers are for screw/nut of quality 8.8.

THREAD	TORQUE (Nm / ftlb) Quality 8.8
M4	2,9 / 2,1
M5	5,7 / 4,2
M6	9,8 / 7,2
M8	24 / 17,7
M10	47 / 34,7
M12	81 / 59,7
M14	128 / 94,4
M16	197 / 145,3
M18	275 / 202,8
M20	385 / 284




## **ASSEMBLY INSTRUCTIONS**

1.

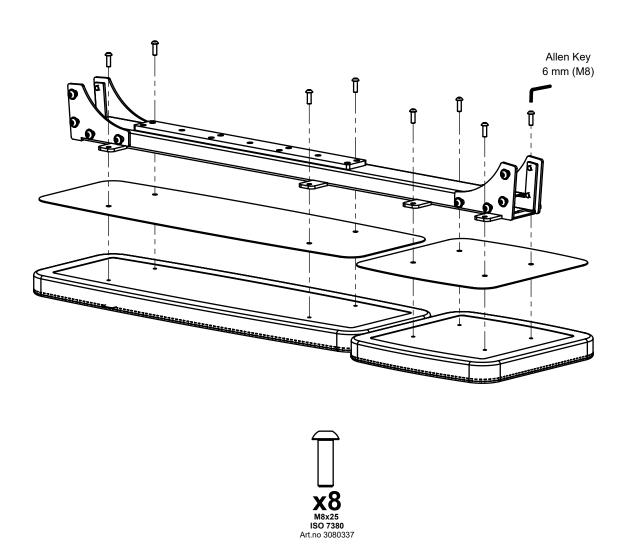



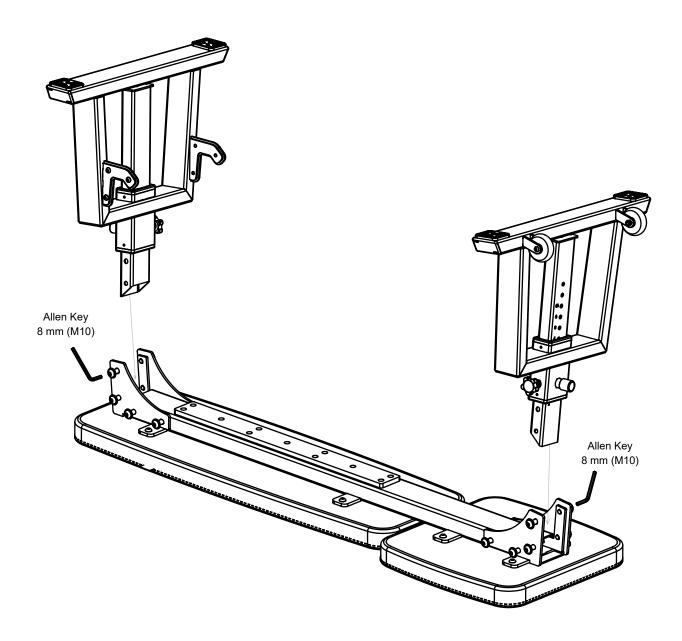

Slide the front and back leg over the l-brackets and then tighten all 16 bolts!



