
Eleiko SVR Platform

RAISE THE BAR

Eleiko SVR Platform - Large
Eleiko SVR Platform - Small

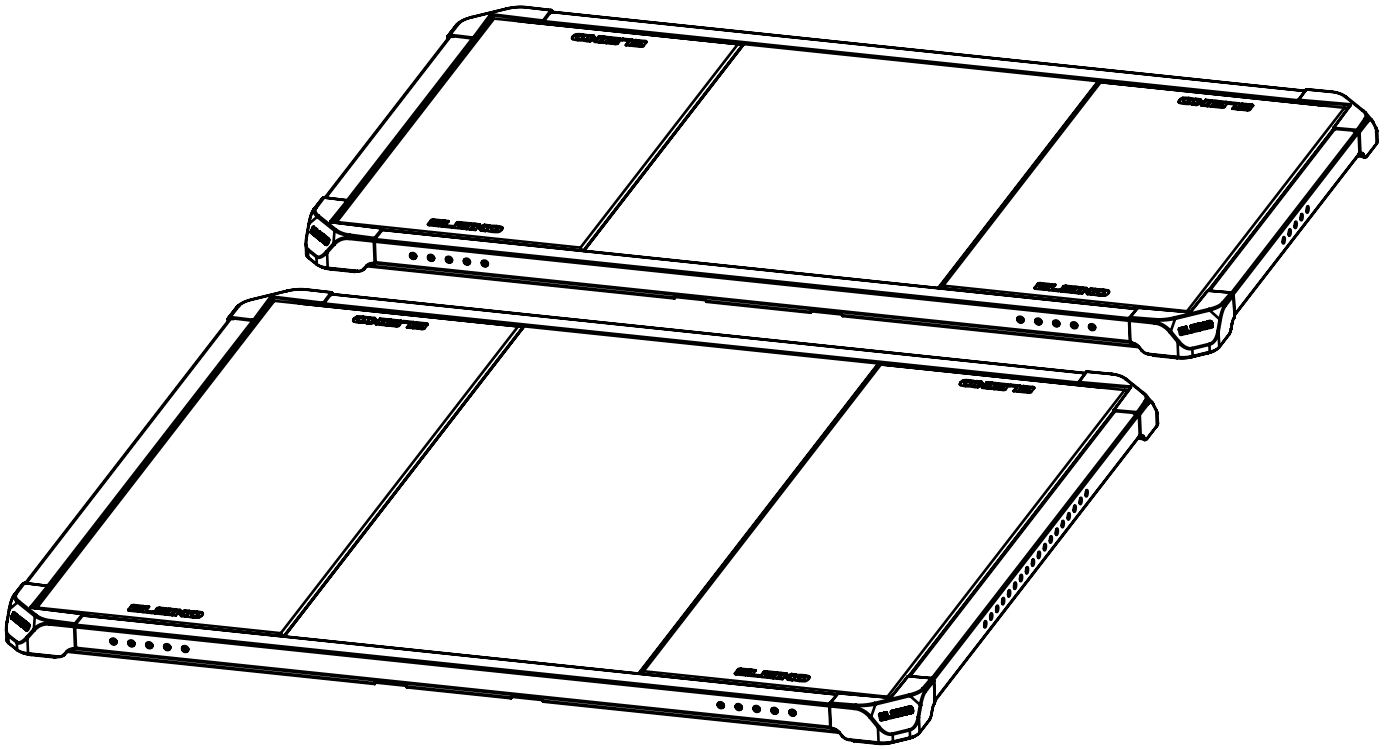

ELEIKO

Content

2 Preventive maintenance & inspections
2 Regularly
2 Spare parts and service
2 Warranty

3 Read before installation and use
3 Caution
3 Safety instructions

4 Product info
4 Purpose
4 General instructions for use
4 Legend
4 Product weight and size

5 User installation
5 Required tools
5 Safety area and recommendations

6 List of components
6 Frame
7 Standing deck
7 Drop zone

8 Assembly instructions
8 Frame
9 Standing deck
10 Drop zone

Preventive maintenance & inspections

Regularly
NOTE: The safety level of the equipment can only be maintained if it is examined regularly for damage and wear.
- Clean the surfaces on frames and tubes from dust and dirt.
- Check that all bolts between parts, walls, floors are properly tightened.
- Check equipment for sharp edges and replace if necessary.

When used intensively it is recommended to switch places on both the Bonded foam and Shock absorber in order to achieve a more even wear and to improve the performance and lifetime of the product.

Spare parts and service
Contact Eleiko for spare parts and service:
www.eleiko.com - Service & Parts

Warranty
All products manufactured by ELEIKO are warranted to the original purchaser to be free from defects in workmanship and / or materials under normal use or service as follows:
- 10 years on welds on structural frame (NOT on moving parts)
- 2 years on Standing deck
- 1 year on other parts

Read before installation and use

Caution
The equipment must be installed and used in a place whose access and supervision are specifically controlled by the owner.
Be sure to install the equipment on a stable base and level the equipment properly. Eleiko recommends that all equipment is secured to floor and installed by a licensed contractor or an Eleiko-installer.
This equipment is intended for indoor use only.


Safety instructions
It is the responsibility of the purchaser of Eleiko products to instruct all users and supervising personnel on proper usage of the equipment.

1. All included warnings (labels) and instructions MUST be read before the use of any Eleiko-equipment. Use each equipment as it is intended for.
2. A user MUST get a medical examination and proper instructions before the use of any Eleiko-equipment.
3. DO NOT let anyone, under any circumstances, use equipment that appears to be damaged. Do not try to repair any equipment before consulting an Eleiko technician.
4. DO NOT replace the components of Eleiko equipment with other non-Eleiko equipment (magnetic safety pin, frames, bars), do not improvise. If there are any doubts consult an Eleiko representative prior to any intervention.
5. DO NOT overload the equipment and DO NOT try to exceed personal strength levels.
6. Children under the age of 14 must be supervised by an adult.
7. DO NOT remove any safety labels from the Eleiko-equipment. Eleiko is not responsible if a label is removed. Replace damaged labels immediately.
8. Eleiko package for products can be made of wood, be aware of splinters, MUST use gloves and proper work wear.
9. Eleiko package material could be a risk when handling, be aware of crushing, MUST use work wear including gloves and hard shoes.
10. Eleiko products and package material is heavy, MUST use proper lifting technique, work wear and hard shoes.

Product info

Purpose
Eleiko Platforms reduce sound and vibration within defined lifting stations.

General instructions for use
Indoor use only.
Stand on the Standing deck when lifting.
Only drop weights on drop zone.
Steel plate only to be dropped from deadlift position.

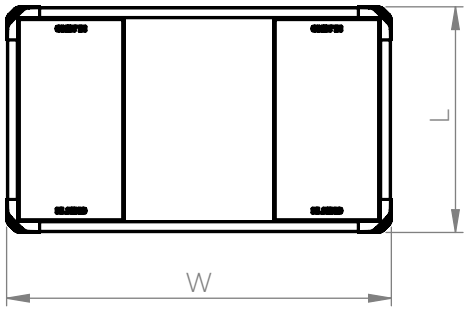

Product weight and size

		SVR Plattform - Large	SVR Plattform - Small
Product weight	kg / lbs	176 / 386	247 / 543
W	mm / inch	2542 / 100	2542 / 100
L	mm / inch	2158 / 85	1488 / 59
Height	mm / inch	100 / 4	100 / 4

User installation



Spanner
Size: 18, 24




Socket Wrench
Size: 18, 24




Socket Extension



Hex Key-kit
Size: 5



Spirit Level

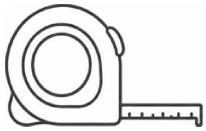


Measuring Tape



Protection Gloves




Safety Shoes

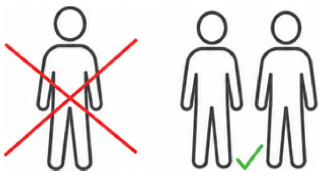


Safety area and recommendations

Clearance


Before assembly, make sure you have enough clearance on all sides of the equipment, not less than 600 mm / 24 inches. Take into account the accessibility to remove bar and weights.

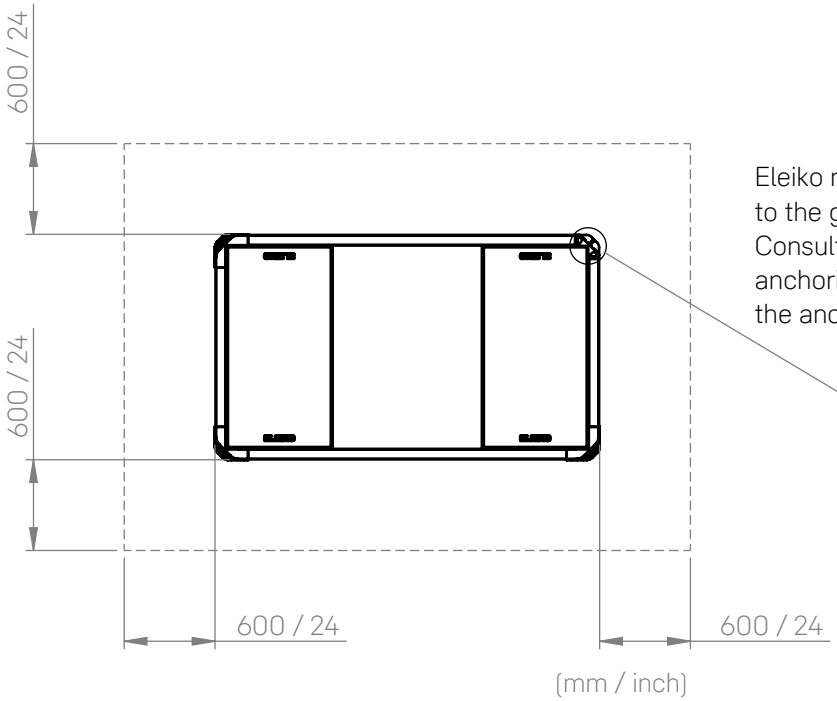

Recommended to bolt to ground

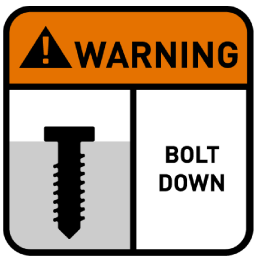


Eleiko recommends that this product should be bolted to the ground. Make sure the ground is solid and level. Consult a licensed contractor to choose the appropriate anchoring fasteners for your facility. See the position of the anchoring point below.

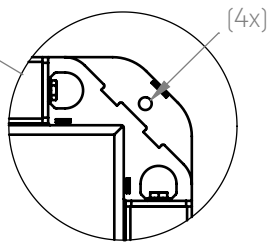


List of components

Frame




2003302 (2x)



Large
2003238 (2x)

Small
2003237 (2x)




Large
2002549 (2x)

Small
2002507 (2x)

2003019

Screw kit




Washer 12
2000744 (16x)

Screw M12x60
2003172-L60 (8x)

Nut M12
2002557 (8x)

Screw M6x12
2000699-L12(4x)

Screw M6x8
2000682-L8 (2x)

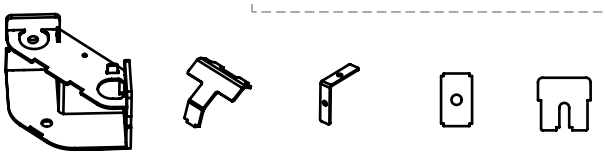

2002269a6
(4x)

2002269p13
(4x)

2002835
(2x)


2002478
(8x)

2002332
(8x)

List of components

Standing deck


Standing deck

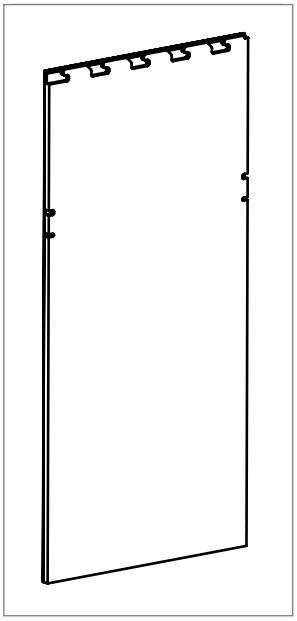

Large
2002581 (1x)

Small
2002580 (1x)

Deck support

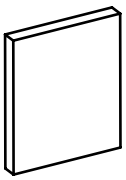

Large
2002555 (6x)


Small
2002555 (4x)



Large
2002556 (4x)

Small
2002556 (2x)


Uneven floor sheet

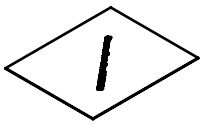

2003212 (2x)
(Used to level up if uneven flooring)

Drop zone

Rubber tile

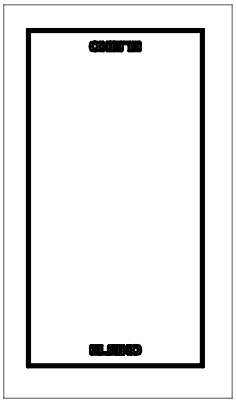


Large
2000802-01 (2x)

Small
2000803-01 (2x)

(Available as spare part)

Bonded foam

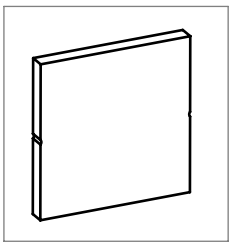


Large
2002321 (6x)

Small
2002321 (4x)

(Available as spare part)

Shock absorber

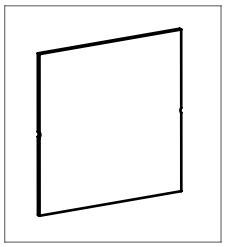


Large
2002346 (6x)

Small
2002346 (4x)

(Available as spare part)

Corner

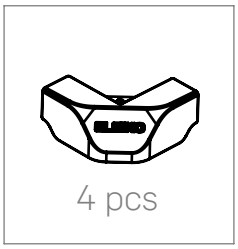

4 pcs

2002573 (1x)


(Available as spare part)

Assembly instructions


Frame

1.


Install all the tubes with the large cutouts facing toward the center.

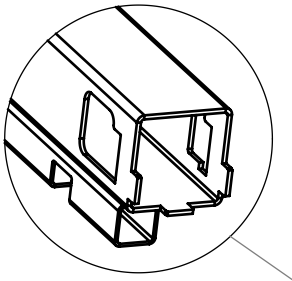


Scan to watch the Corner assembly installation guide.

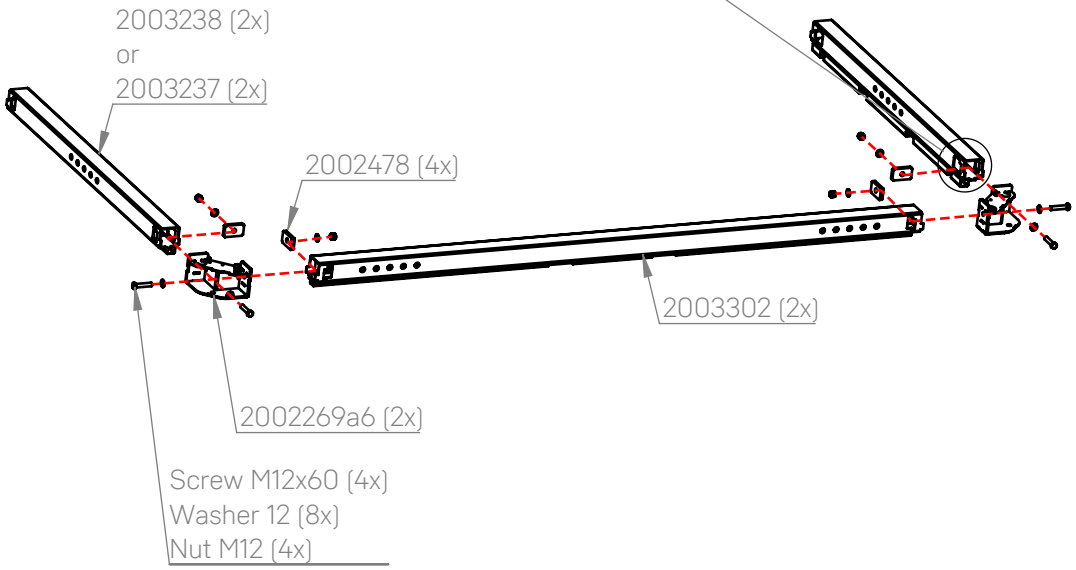


2.

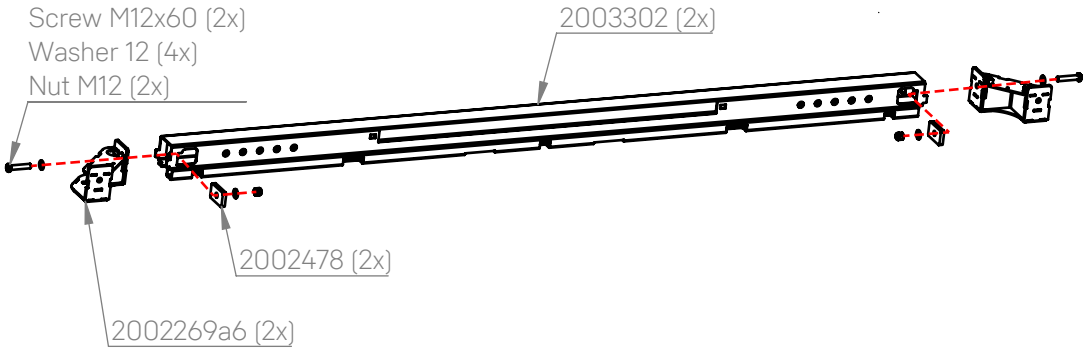


Standing deck



1.

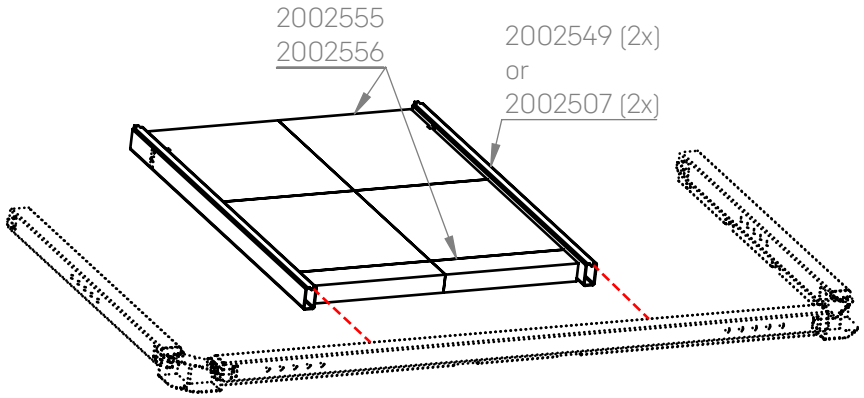


2.

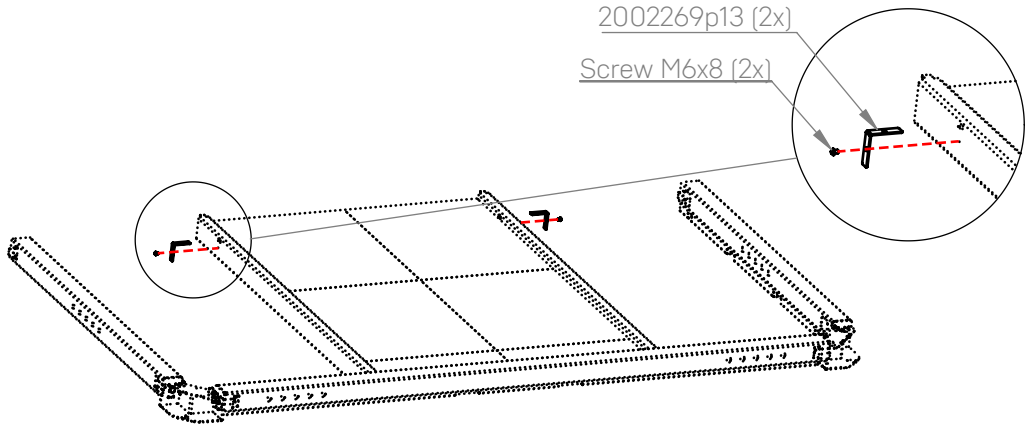

3.


Ensure the tab on the frame is properly inserted into the slot in the Standing deck.

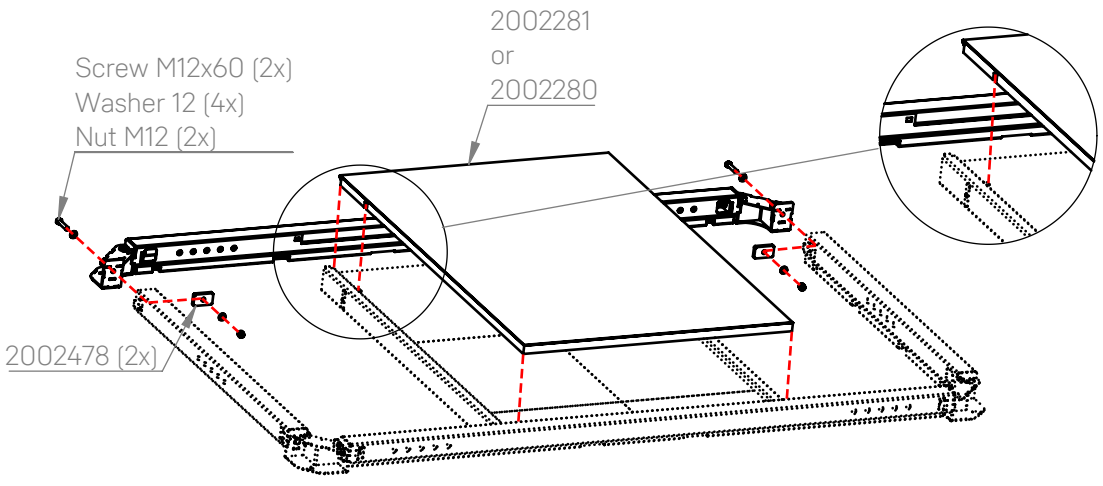


Drop zone

1.

Scan to watch the Shock absorber & Bonded foam installation guide.

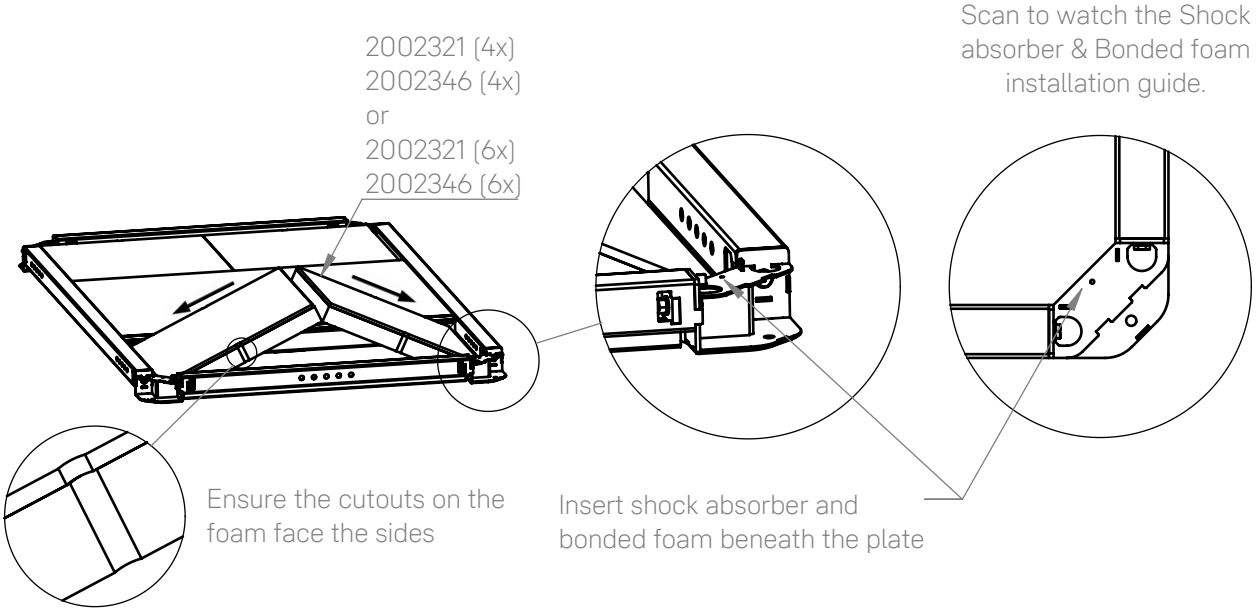


2.

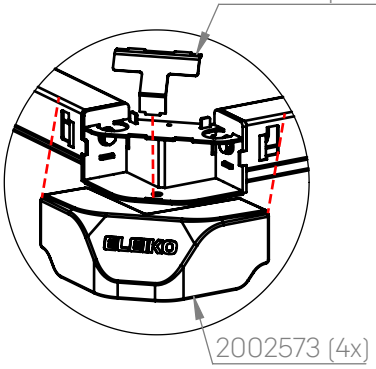


3.


Scan to watch the Corner Cover installation guide.

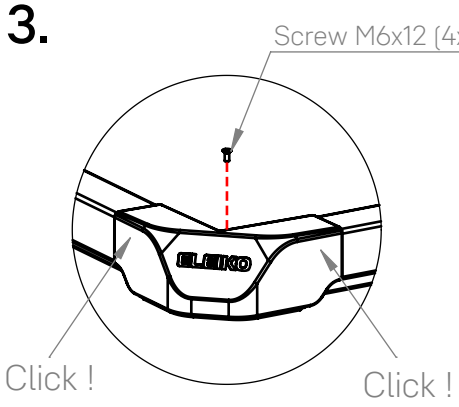

4.

Scan to watch the Shims installation guide.

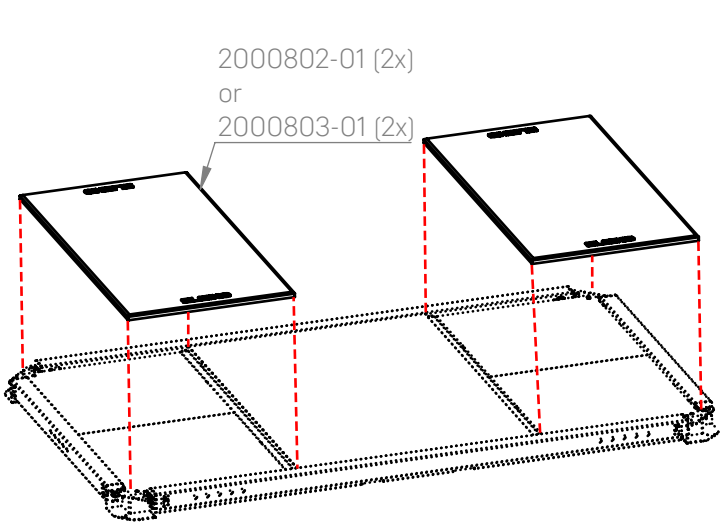

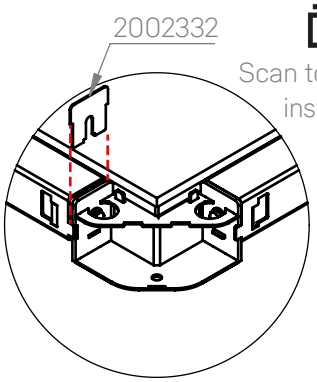

Ensure at least a 1 mm gap is maintained between the rubber tile and the frame for proper fit.

Add shims if needed to adjust the size of the rubber tile.

RAISE THE BAR

Eleiko Group AB
Klastorpsvägen 18
302 62 HALMSTAD
Sweden

info@eleiko.com
+46 35 17 70 70
www.eleiko.com

2002953-M
rev. 2026-08-31 -.1

ELEIKO