
Eleiko SVR Rack Platform

RAISE THE BAR

SVR Half Rack Platform - Large
SVR Half Rack Platform - Small
SVR Double Half Rack Platform - Large
SVR Double Half Rack Platform - Small
SVR Power Rack Platform - Large
SVR Power Rack Platform - Small

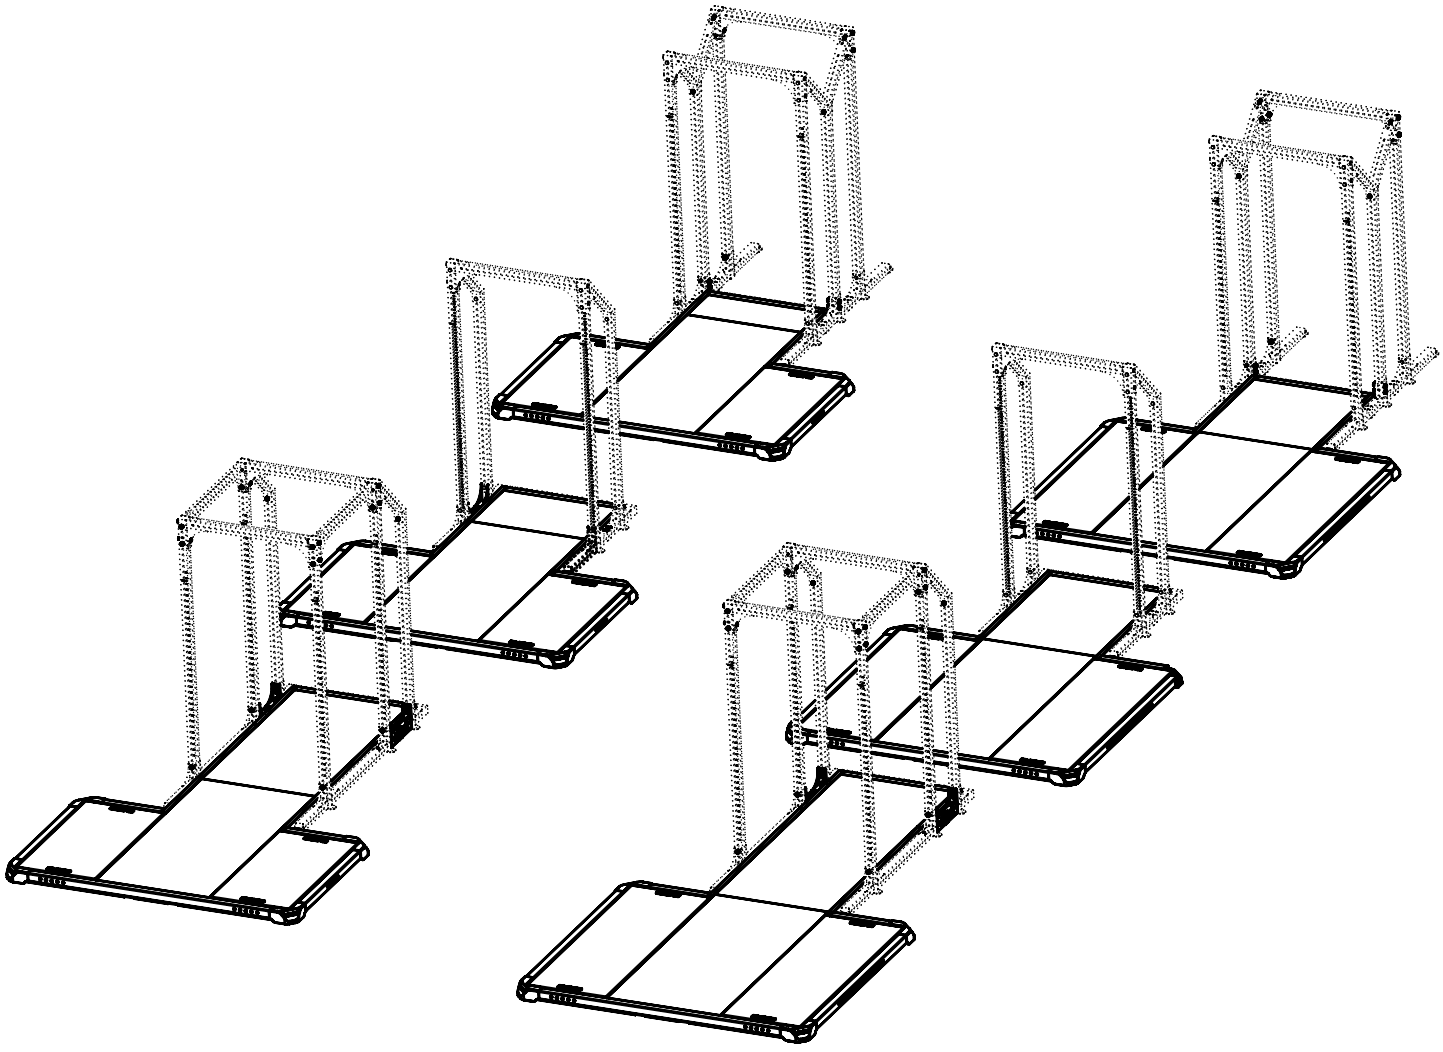

ELEIKO

Content

2 Preventive maintenance & inspections
2 Regularly
2 Spare parts and service
2 Warranty

3 Read before installation and use
3 Caution
3 Safety instructions

4 Product info
4 Purpose
4 General instructions for use
4 Legend
4 Product weight and size

5 User installation
5 Required tools
5 Safety area and recommendations

6 List of components
6 Frame insert
6 Frame drop zone
7 Standing deck
7 Drop zone

8 Assembly instructions
8 Frame Insert
9 Frame drop zone
10 Standing deck
11 Drop zone

Preventive maintenance & inspections

Regularly
NOTE: The safety level of the equipment can only be maintained if it is examined regularly for damage and wear.
- Clean the surfaces on frames and tubes from dust and dirt.
- Check that all bolts between parts, walls, floors are properly tightened.
- Check equipment for sharp edges and replace if necessary.

When used intensively it is recommended to switch places on both the Bonded foam and Shock absorber in order to achieve a more even wear and to improve the performance and lifetime of the product.

Spare parts and service
Contact Eleiko for spare parts and service:
www.eleiko.com - Service & Parts

Warranty
All products manufactured by ELEIKO are warranted to the original purchaser to be free from defects in workmanship and / or materials under normal use or service as follows:
- 10 years on welds on structural frame (NOT on moving parts)
- 2 years on Standing deck
- 1 year on other parts

Read before installation and use

Caution
The equipment must be installed and used in a place whose access and supervision are specifically controlled by the owner.
Be sure to install the equipment on a stable base and level the equipment properly. Eleiko recommends that all equipment is secured to floor and installed by a licensed contractor or an Eleiko-installer.
This equipment is intended for indoor use only.

Safety instructions
It is the responsibility of the purchaser of Eleiko products to instruct all users and supervising personnel on proper usage of the equipment.

1. All included warnings (labels) and instructions MUST be read before the use of any Eleiko-equipment. Use each equipment as it is intended for.
2. A user MUST get a medical examination and proper instructions before the use of any Eleiko-equipment.
3. DO NOT let anyone, under any circumstances, use equipment that appears to be damaged. Do not try to repair any equipment before consulting an Eleiko technician.
4. DO NOT replace the components of Eleiko equipment with other non-Eleiko equipment (magnetic safety pin, frames, bars), do not improvise. If there are any doubts consult an Eleiko representative prior to any intervention.
5. DO NOT overload the equipment and DO NOT try to exceed personal strength levels.
6. Children under the age of 14 must be supervised by an adult.
7. DO NOT remove any safety labels from the Eleiko-equipment. Eleiko is not responsible if a label is removed. Replace damaged labels immediately.
8. Eleiko package for products can be made of wood, be aware of splinters, MUST use gloves and proper work wear.
9. Eleiko package material could be a risk when handling, be aware of crushing, MUST use work wear including gloves and hard shoes.
10. Eleiko products and package material is heavy, MUST use proper lifting technique, work wear and hard shoes.


Product info

Purpose
Designed for seamless integration into Prestera racks, Eleiko SVR Rack Platforms reduce sound and vibration within defined lifting stations.

General instructions for use
Indoor use only.
Stand on the Standing deck when lifting.
Only drop weights on drop zone.
Steel plate only to be dropped from deadlift position.

Legend
HR - Half Rack
DHR - Double Half Rack
PR - Power Rack
S - Small platform
L - Large platform

Example for description of platform combination
HR S = Half Rack Small

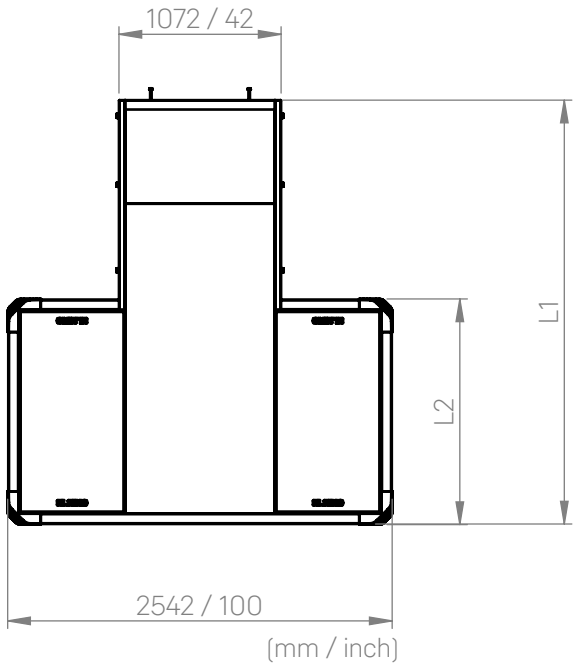

Product weight and size

		HR S	DHR S	PR S
Product weight	kg / lbs	216 / 476	209 / 461	248 / 547
L1	mm / inch	2800 / 110	2565 / 101	3948 / 155
L2	mm / inch	1488 / 59	1488 / 59	1488 / 59
H	mm / inch	100 / 4	100 / 4	100 / 4

		HR L	DHR L	PR L
Product weight	kg / lbs	288 / 635	281 / 620	318 / 701
L1	mm / inch	3475 / 137	3235 / 127	4615 / 182
L2	mm / inch	2158 / 85	2158 / 85	2158 / 85
H	mm / inch	100 / 4	100 / 4	100 / 4

User installation

Required tools

You need the following tools to assemble the equipment.



Spanner
Size: 18, 24




Socket Wrench
Size: 17, 18, 24




Socket Extension



Hex Key-kit
Size: 5



Spirit Level

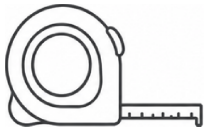


Measuring Tape



Protection Gloves




Safety Shoes

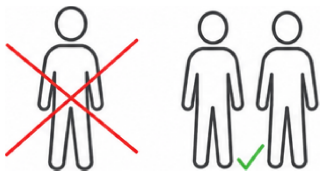


Safety area and recommendations

Clearance


Before assembly, make sure you have enough clearance on all sides of the equipment, not less than 600 mm / 24 inches. Take into account the accessibility to remove bar and weights.

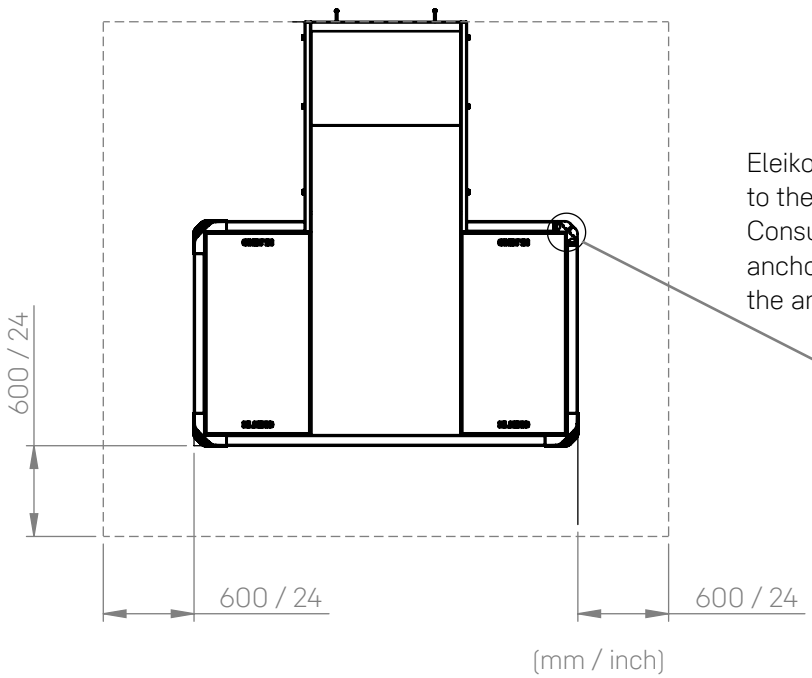

Recommended to bolt to ground

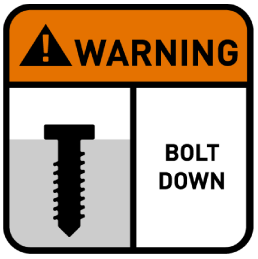


Eleiko recommends that this product should be bolted to the ground. Make sure the ground is solid and level. Consult a licensed contractor to choose the appropriate anchoring fasteners for your facility. See the position of the anchoring point below.

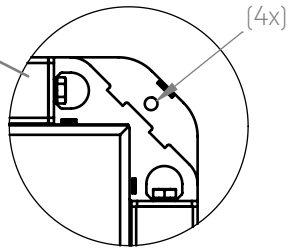

List of components

Frame insert

2002845 **HR**
2002823 **DHR**
2003160 **PR**

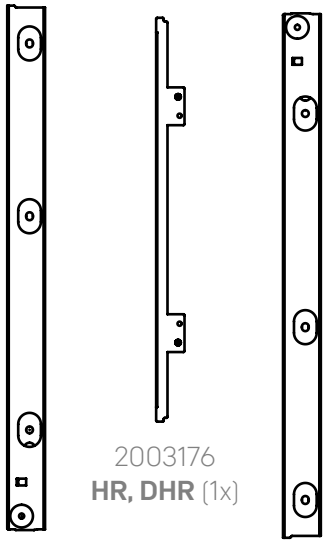

Screw kit HR, DHR



Screw M10x100
2001695-100 (2x)

Washer 10
2001623 (2x)

Nut M10
2000718 **DHR** (1x)



2003196
(2x)

Screw kit M16



2002120 (3x)

2003176
HR, DHR (1x)

2003194 **HR** (1x)
2003197 **DHR** (1x)
2003159 **PR** (1x)

2003195 **HR** (1x)
2003198 **DHR** (1x)
2003199 **PR** (1x)

2002704 **PR**



2002617 **PR** (1x)



2002619 **PR** (1x)



2003176 **PR** (1x)

Screw kit PR



Screw M10x100
2001695-100 (2x)


Washer 10
2001623 (2x)

Screw kit PR




2002120 (2x)

Frame drop zone




2003302 (1x)



Large
2003238 (2x)


Small
2003237 (2x)



Large
2002549 (2x)

Small
2002507 (2x)

2003000

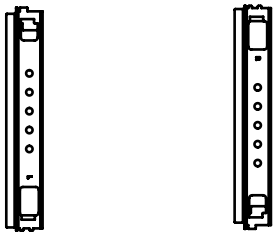

2003309 (1x)
2003311 (1x)

2002269

Screw kit




Washer 12
2000744 (20x)

Screw M12x60
2003172-L60 (10x)

Nut M12
2002557 (10x)

Screw M6x12
2000699-L12 (4x)

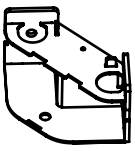

2002269a6
(4x)



2002269p13
(4x)



2002478
(8x)




2002332
(8x)

List of components


Standing deck

Standing deck

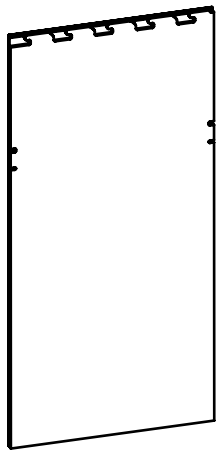


2002581 **HR L** (1x)
2002581 **HR S** (1x)
2002581 **DHR L** (1x)
2002581 **DHR S** (1x)
2003420 **PR L** (1x)
2003420 **PR S** (1x)

Standing deck

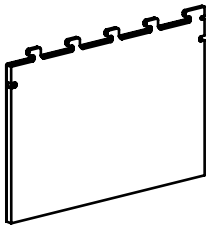

2002582 **HR L** (1x)
2002585 **HR S** (1x)
2002691 **DHR L** (1x)
2002583 **DHR S** (1x)
2002965 **PR L** (1x)
2002584 **PR S** (1x)

Deck support

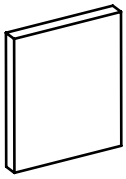


2002555



2002556

Uneven floor sheet

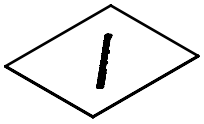


2003212
(Used to level up if uneven flooring)

	Deck support		Uneven floor sheet
Platform	2002555	2002556	200212
HR L	10x	6x	4x
HR S	8x	6x	2x
DHR L	10x	2x	4x
DHR S	8x	2x	2x
PR L	14x	6x	4x
PR S	12x	4x	4x

Drop zone

Rubber tile

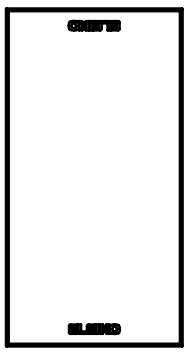


Large
2000802-01 (2x)

Small
2000803-01 (2x)

(Available as spare part)

Bonded foam

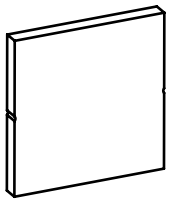


Large
2002321 (6x)

Small
2002321 (4x)

(Available as spare part)

Shock absorber

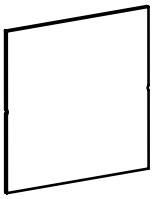


Large
2002346 (6x)

Small
2002346 (4x)

(Available as spare part)

Corner



4 pcs

2002573 (1x)


(Available as spare part)

Assembly instructions


Frame insert

1.


Scan to watch the Frame Insert installation guide.

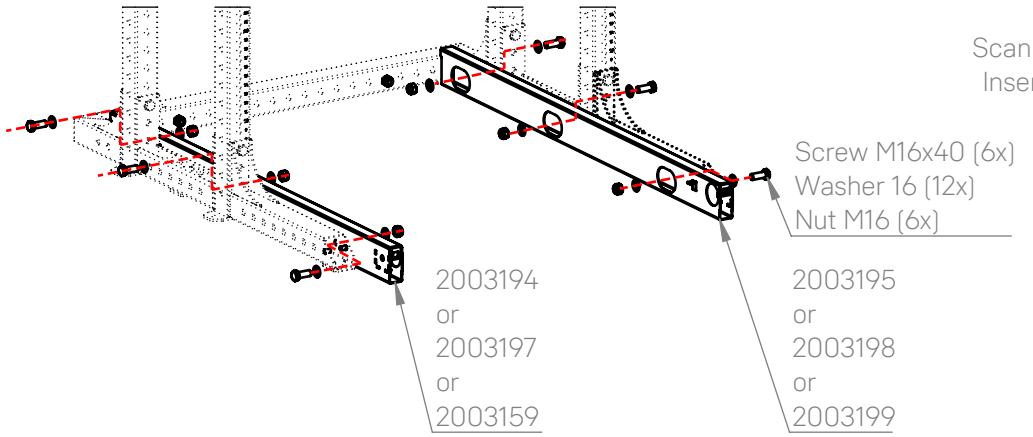

2.

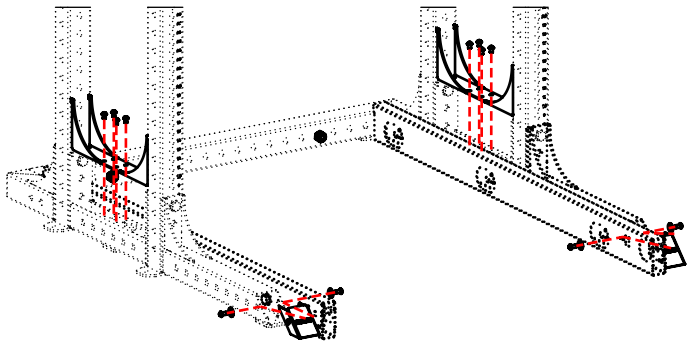


Note! The step below applies only to configurations with a Double Half Rack and two SVR platforms facing each other.

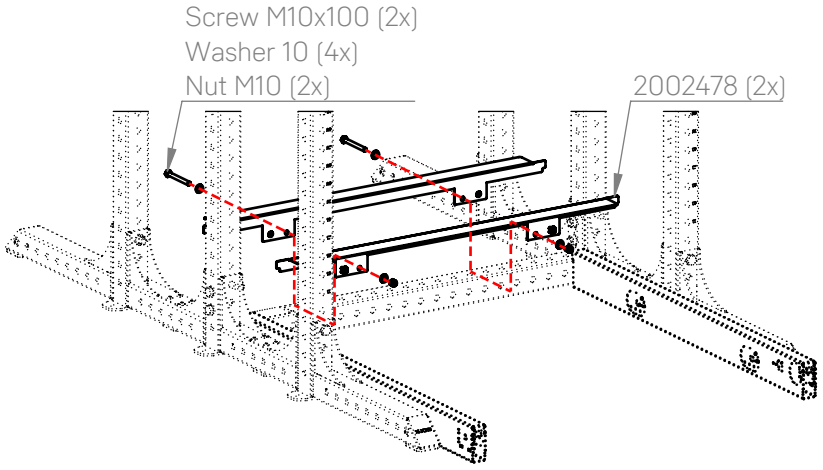


Frame drop zone

1.


Scan to watch the Corner assembly installation guide.

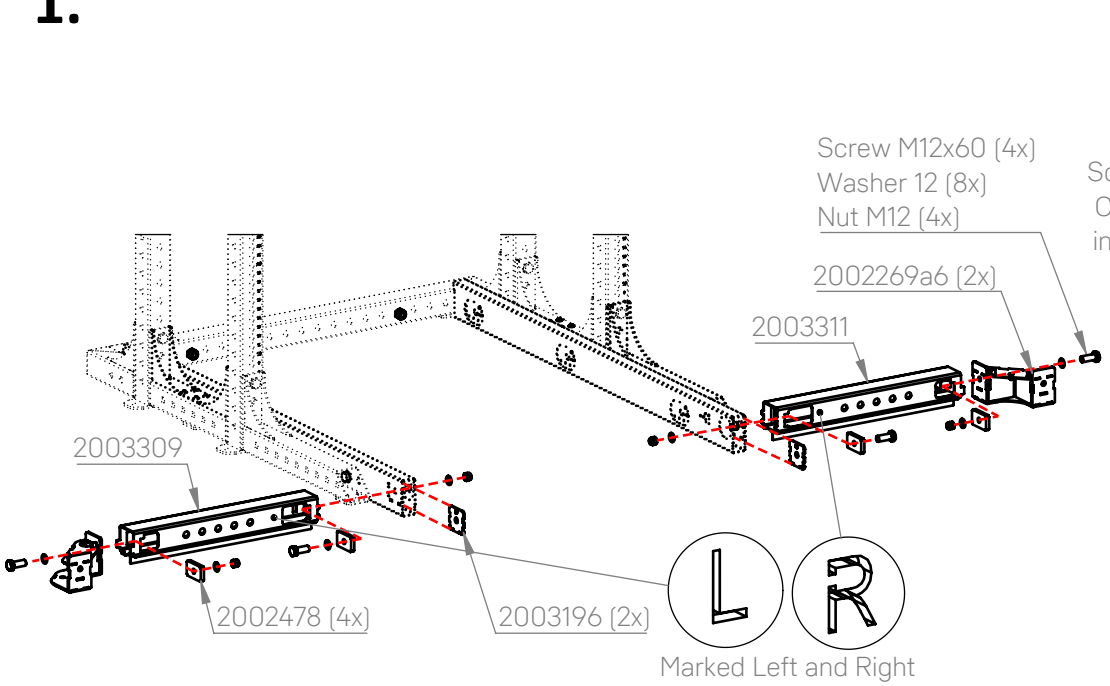

2.

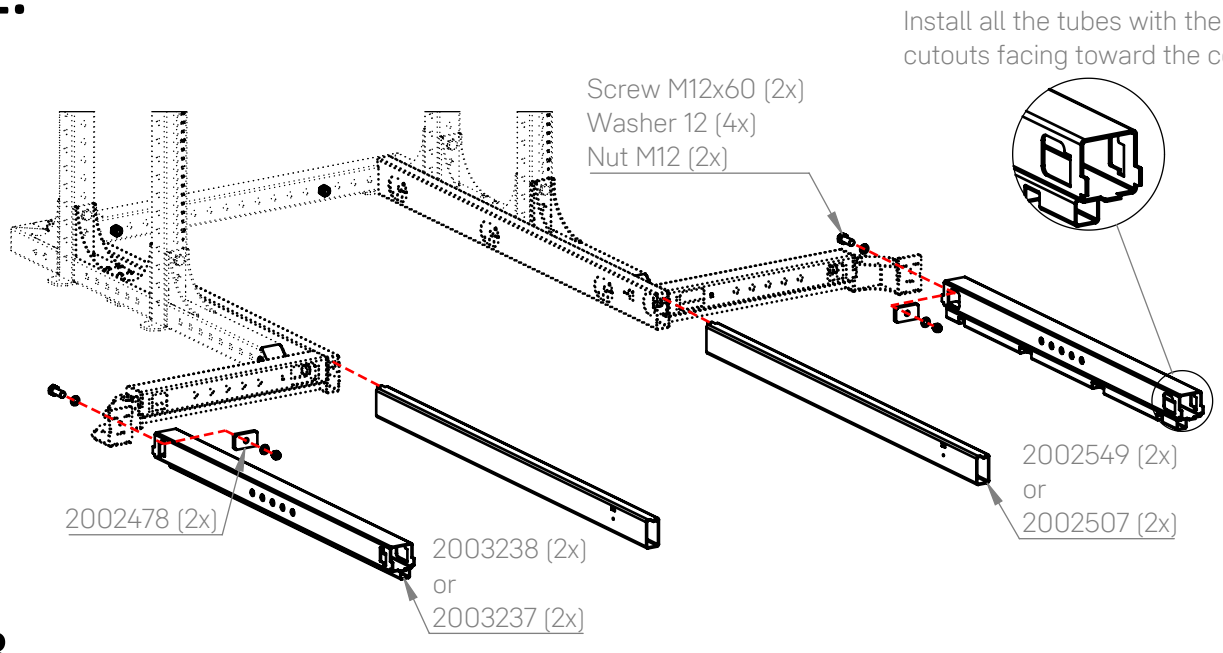


3.

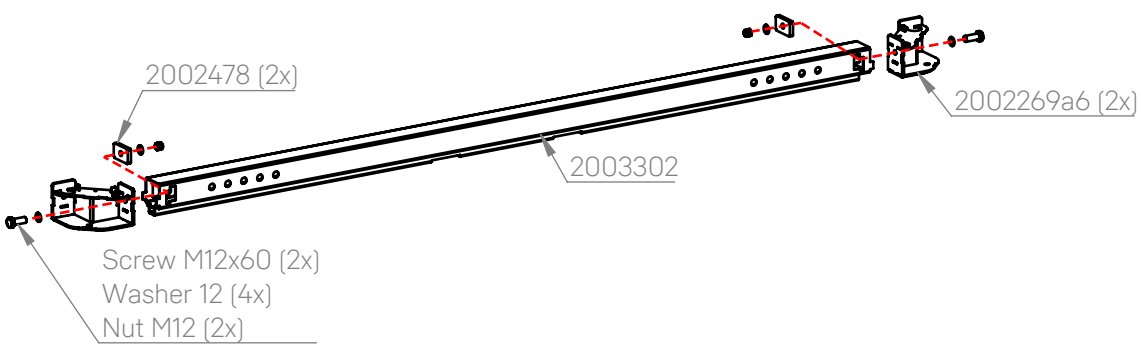


Standing deck

1.

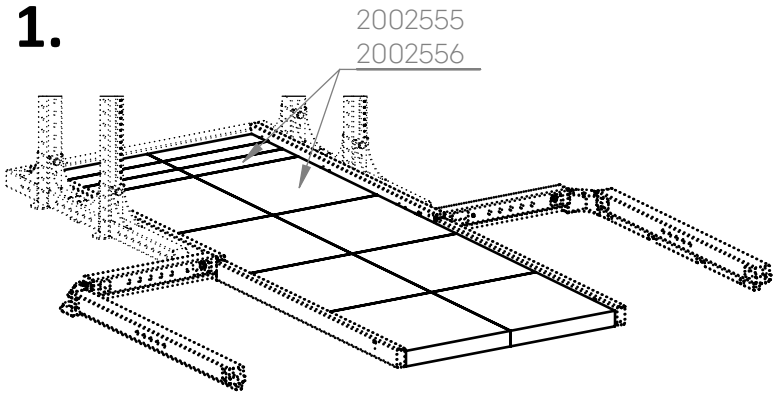

2.

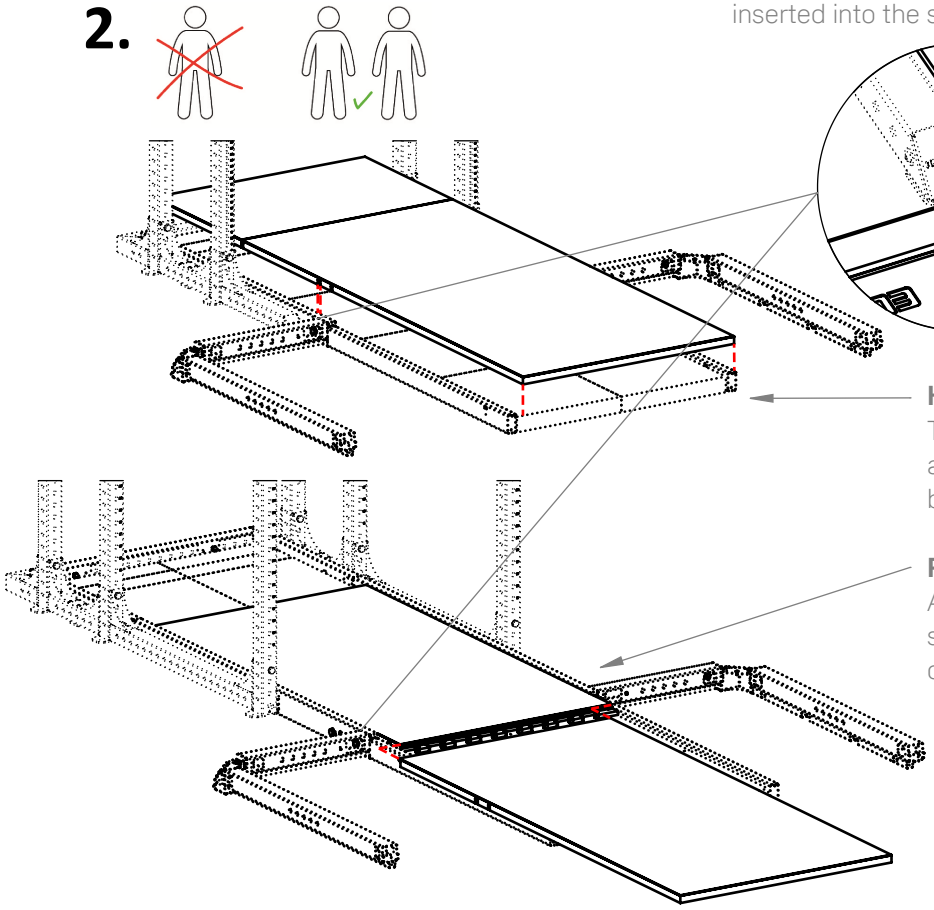

Ensure the tab on the frame is properly inserted into the slot in the Standing deck.


Scan to watch the Standing Deck slot & tab installation guide.

HR & DHR
The Standing deck, if in two parts, can be assembled beside the platform before being lowered into position.

PR
Assemble the Standing deck on the Deck support as shown. DO NOT lift the Standing deck assembled.




3.

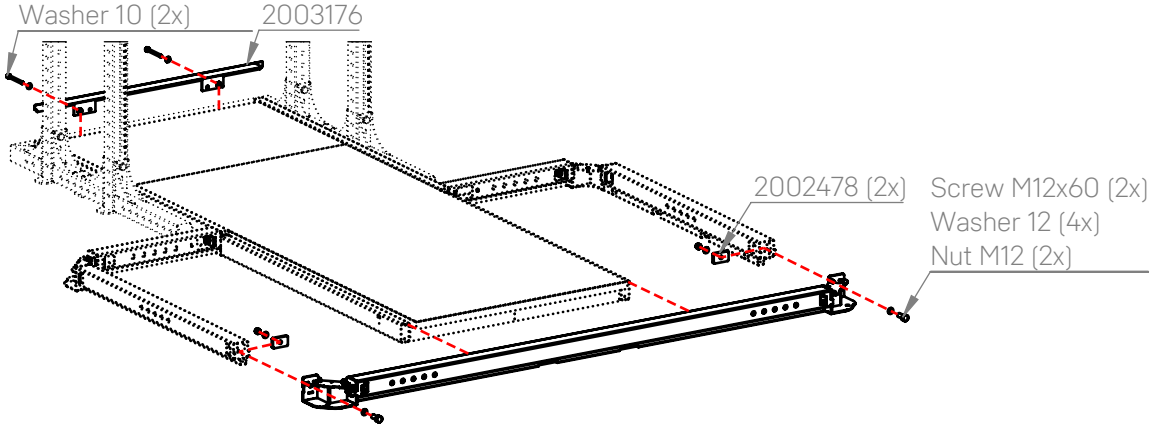


Drop zone

1.

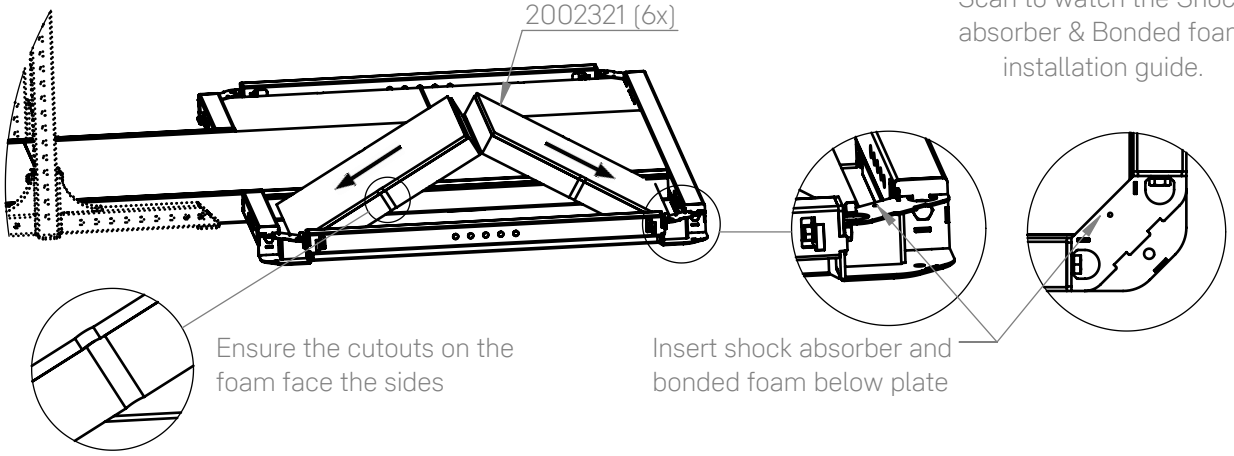


Scan to watch the Shock absorber & Bonded foam installation guide.

2.

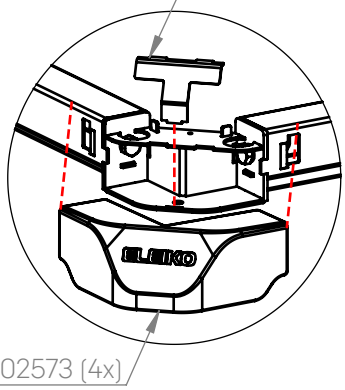



3.

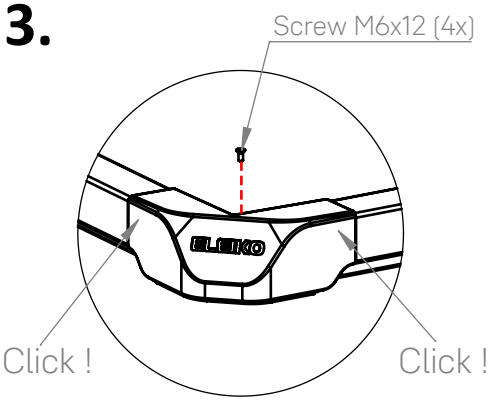

Scan to watch the Corner Cover installation guide.

4.

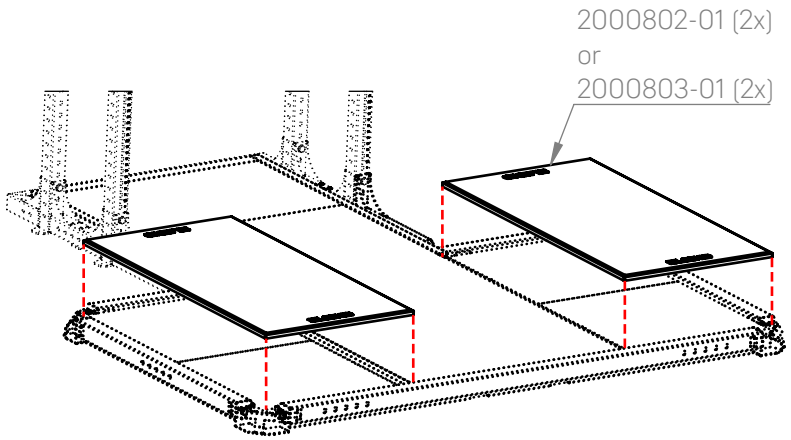

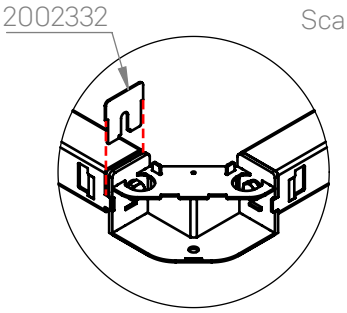

Ensure at least a 1 mm gap is maintained between the rubber tile and the frame for proper fit.

Add shims if needed to adjust the size of the rubber tile.

Scan to watch the Shims installation guide.

RAISE THE BAR

Eleiko Group AB
Klastorpsvägen 18
302 62 HALMSTAD
Sweden

info@eleiko.com
+46 35 17 70 70
www.eleiko.com

2002954-M
rev. 2026-08-31 -.1

ELEIKO