





RUBTILER

RUBBER TILE INSTALLATION GUIDE

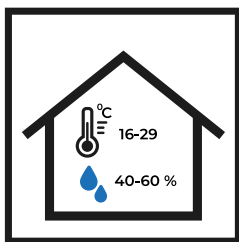


1. RUBTILER tiles and mats must be stored in an indoor, climate controlled space and be protected from fire, dirt, water and other elements. Temperature must be maintained between 16°C and 29°C with a relative humidity between 40% and 60%.

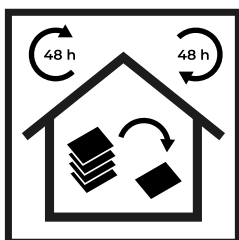


2. 48 hours prior to installation and 48h after, product must be site conditioned at wellventilated areas in temperature between 18°C and 26°C. We recommend to take tiles/mats out of pallet, separately, laid down for correct shape regaining and flatten out before installation.




3. Inspect product prior to installation for manufacturing defects, correct colour, and size. An RUBTILER distributor or representative must be notified of any defects before installation proceeds. If flooring has been installed it has been deemed as accepted.

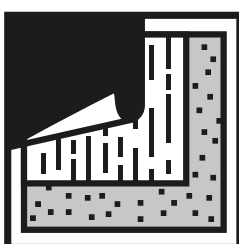



4. Suitable substrates include but are not limited to permanently dried concrete and wood.

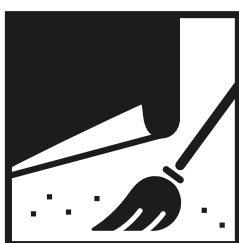

5. Substrates needs to be cleaned of dirt, dust, debris cause those could interfere the final surface. Moisture in the substrate negatively affects rubber tiles/mats and should be eliminated prior to installation.


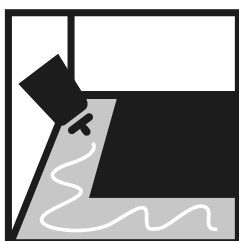


6. Tiles can be stuck to the substrates with double face tape or not caustic glue/adhesive (sometimes silicon glue is enough). Glue all tiles to the floor is not a necessity, it depends from particular need of installation and product shape. We recommend to glued down at least tiles/mats placed on edges of whole covered area.

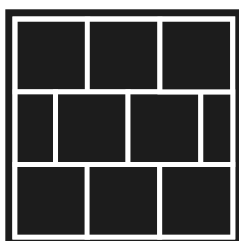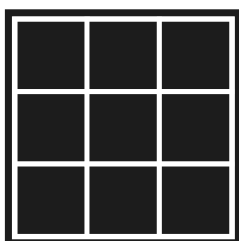


7. There are two main methods of installation square tiles :



- a) Diagonal tiles layout, tile to tile.
- b) Running bond like brick wall (recommended the most)

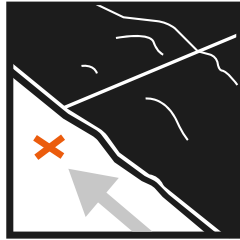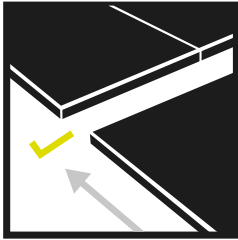


8. While installing, tiles/mats needs to be pushed up one to each other, but not extremely cause that can make bulges.

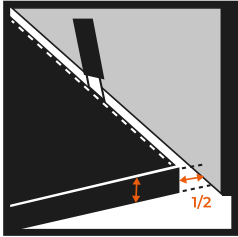

9. You can trim rubber tiles/mats to the final length or shape (knife or sabre saw/jigsaw with blade dedicated to rubber). Leaving a slight gap at the walls, roughly half of the thickness of the material being installed, is recommended and can be hidden with a cove base type moulding. Under normal interior conditions (in temperature between 18°C and 26°C), the rubber flooring is very stable and will not expand or shrink, but because it is rubber, it can stretch. Please be aware that our rubber tiles/mats standards allow a tolerance up to 5mm on dimensions.

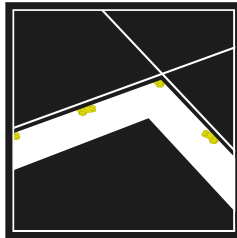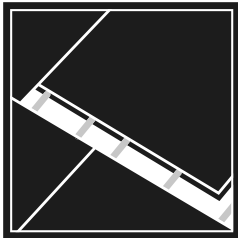

10. You can also use plastic pins for additional tiles connecting (but min thickness for pins is 25mm tile, there are 2 or 4 pin holes on only two sides of tiles and you connect them with plastic pins like 55 or 70 mm long). To some of our tiles/mats you can use Four Pin Plate Connector, while you can connect tiles on the corners (with one connector) from the bottom of the tiles.

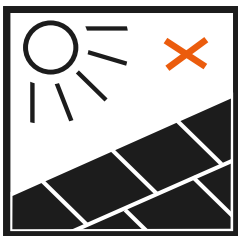

11. In areas that are exposed to intense or direct sunlight, the product must be protected during the conditioning, installation, and usage, by covering the light source. Exposure to excessive UV rays can result in fading, degradation, colour variation and crumbling. If you plan expose tiles/mats to direct sunlight ask for UV protection option.



12. Cleaning only with water and very delicate wash detergents. Sweep and mopping, vacuuming is allowed but only with soft end brush. All plastic finisher ends are not allowed (cause of shredding and grinding of the surface).



13. It is important not to get the flooring too wet as this may have an adverse effect on installed tiles/mats and adhesive system employed.

14. Contact your RUBTILER partner in any doubt.

RUBTILER

Vinderen Sp. z o.o. ul. Jutrzenki 177 02-231 Warszawa

Tadeusz Pawlus

0048663887704